X-RiteColor® Master Web Edition

Ce document décrit la procédure d'installation de X-RiteColor Master Web Edition. Suivez attentivement toutes les instructions dans l'ordre indiqué. Avant de continuer, vérifiez que Windows Server 2008 R2, 2012 R2 ou 2016 est installé et que les services Bureau à distance (TermService) sont en cours d'exécution. Ce serveur doit être un serveur X-RiteColor Master dédié et ne doit pas être utilisé à d'autres fins. Il ne doit pas non plus appartenir à un autre domaine afin d'éviter que les paramètres du domaine ne perturbent le fonctionnement de ce serveur. Si le serveur se trouve derrière un pare-feu, configurez le port TCP 3389 (ou 3391 si vous utilisez UDP) de sorte qu'il soit accessible via le pare-feu.

Vérifiez que Microsoft Windows 2008 R2 est installé et configuré avec les « Rôles du serveur » indiqués cidessous (Figure 1). Vérifiez que Microsoft Server 2012 R2 ou Windows Server 2016 est installé et configuré avec les « Rôles du serveur » indiqués ci-dessous (Figure 2).



Figure 1

h		Server Manager	- 🗆 🗙
E	Servers	🗸 🅄 🍢 Manage Tools	View Help
	Overview	SERVERS All servers 1 total	TASKS 💌
i ii	Servers	Filter $ ho$ (ii) \checkmark (ii) \checkmark	\odot
iii •9		Server Name IPv4 Address Manageability Last Update	Windows
		XRGRRCTX001D 10.27.148.159 Online - Performance counters not started 8/4/2021 9:46:30	AM 00252-70
⊗ ⊳		<	>
		EVENTS All events 2 total Filter Filter Server Name ID Severity Source XRGRRCTX001D 20499 Warning Microsoft-Windows-TerminalServices-RemoteConnectionM XRGRRCTX001D 20499 Warning Microsoft-Windows-TerminalServices-RemoteConnectionM	TASKS
		<	>
		SERVICES All services 3 total	TASKS 💌
		Filter P 🗎 🕶 🛞 🕶	\odot
		Server Name Display Name Service Name Status Start Type	
		XKGRRCTX001D Remote Desktop Services TermService Running Manual XRGRRCTX001D Remote Desktop Licensing TermServLicensing Running Automatic	
		XRGRRCTX001D Remote Desktop Gateway TSGateway Running Automatic (De	layed Start)

Figure 2

Installation de la mise à jour

Si vous mettez à jour une version précédemment installée, vérifiez que tous les utilisateurs de X-RiteColor Master Web Edition sont déconnectés. Connectez-vous au serveur **en tant qu'administrateur**, puis installez X-RiteColor Master Web Edition. Pour Windows Server 2008 R2, utilisez la procédure « Installer une application sur un serveur Terminal Server » dans la section Programmes du Panneau de configuration (Figure 3). Pour Windows Server 2012 R2 ou Windows Server 2016, utilisez la procédure « Installer une application sur un serveur Bureau à distance » dans la section Programmes du Panneau de configuration (Figure 4).



Figure 3



Figure 4

Le serveur passe automatiquement en mode installation (Figure 5). Cette étape est nécessaire pour installer les programmes avec les services Terminal Server. Acceptez toutes les options par défaut durant l'installation.

Install Program From Flo	ppy Disk or CD-ROM	<
	Insert the product's first installation floppy disk or CD-ROM, and then click Next. The application will be installed in TS-Install mode. What is TS-Install mode?	
	< <u>B</u> ack <u>N</u> ext > Cancel	

Figure 5

Juste avant la fin de l'installation de la mise à jour, l'écran Ouverture d'une session d'administration s'affiche, avec « admin » comme **Nom de l'administrateur** (Figure 6).

- Pour continuer, tapez le mot de passe *admin* actuel (si aucun mot de passe n'est défini, tapez « password »).
- 2. Cliquez sur OK.
- 3. Cliquez sur Terminer.

Administrator Login	×
Server: XRCMWEB	ок
Administrator User Name: admin	Cancel
Password:	

Figure 6

Nouvelle installation et configuration utilisateur

La première étape du processus d'installation consiste à installer X-RiteColor Master Web Edition sur le serveur. Connectez-vous au serveur **en tant qu'administrateur**, puis installez X-RiteColor Master Web Edition. Acceptez toutes les options par défaut durant l'installation.

Inscription du produit

Vous devez activer et inscrire X-RiteColor Master avant d'exécuter le programme.

- 1. Double-cliquez sur l'icône **Activer** sur le Bureau. La boîte de dialogue Activer s'affiche (Figure 7).
- 2. Sélectionnez le produit que vous avez acheté, puis cliquez sur OK.

Activate	×
QA Edition	ОК
QA Edition + SpectroSync ^{***} Formulation Edition	Cancel
C Formulation Edition + SpectroSync™	

Figure 7

3. Sur l'écran d'inscription qui s'affiche (Figure 8), tapez la clé de licence, puis cliquez sur **Licence**.

OU

Cliquez sur le lien pour effectuer l'inscription en ligne.

License Status:	LICENSED 1	Continue			
If you have internet access, write down the Registration Code below and click the following link to register online and obtain your License Key via e-mail.					
Click here to Register Online					
OR Contact X-Rite Applications Support at 888-826-3046 (Option #2) or refer to the materials included with your software for Licensing instructions.					
instructions.					
License Key:	CZQWQKWUMPPK				

Figure 8

Paramètres de configuration des services Terminal Server / Bureau à distance

- 1. Pour **Windows Server 2008 R2**, dans le menu Démarrer de Windows, sélectionnez Programmes > Outils d'administration > Services Terminal Server > Configuration des services Terminal Server.
- 2. Dans la boîte de dialogue Configuration des services Terminal Server, effectuez les sélections indiquées dans la Figure 9.

Marminal Services Configurat	tion					_ 🗆 ×
File Action View Help						
🔶 🧼 📰 😰 🗊						
Terminal Services Configuration:	Configuration for terminal server:					
φ Licensing Diagnosis	XCMWEB-200	8				Terminal Ser 🔺
	You can use Termina and delete connectio	I Services Configuration to ns. You can configure sett	configure sett ings on a per-	ings for new connectio connection basis, or fo	ons, modify the settings of existing r the terminal server as a whole.	Create N Refresh Connect
	Connections					View 🕨
	Connection Name	Connection Type	Transport	Encryption	Comment	7 Help
	RDP-Tcp	Microsoft RDP 6.1	tcp	Client Compatible		Connection N
						Connection N
	Edit settings					
		faldam an aut	Vee			
	Use temporary fol	ders per session	Yes			
	Restrict each use	r to a single session	Yes			
	User logon mode		Allow all	connections		
	Licensing					
	License server di	scovery mode	Automat	ic		
	Terminal Services	licensing mode	Per Dev	ice		
	Member of farm in	TS Session Broker	No			

Figure 9

- 3. Cliquez avec le bouton droit sur RDP-Tcp dans la section **Connexions**, puis sélectionnez **Propriétés**.
- 4. Dans la boîte de dialogue Propriétés, modifiez les paramètres situés sous les onglets Sessions, Contrôle distant et Réglages client en vous reportant aux figures suivantes.

5. Cliquez sur l'onglet **Sessions**, puis effectuez les sélections indiquées sur la Figure 10.

Override user settings End a disconnected session: 1 mir	
End a disconnected session: 1 mir	
-	nute
Active session limit: New	er
Idle session limit: 3 ho	urs
O <u>v</u> enide user settings	
When session limit is reached or conr	nection is broken:
O Disconnect from session	



6. Cliquez sur l'onglet **Contrôle distant**, puis effectuez les sélections indiquées sur la Figure 11.

General Log on Settings Sessions Environment Remote Control Client Settings Network Adapter Security You can use remote control to remotely control or to view a user's session. Image: Control of the session. Image: Control of the security Image: Control with default user settings Image: Control of the security Image: Control of the security Image: Control with the following settings: Image: Control of the security Image: Control of the security Image: Control with the following settings: Image: Control of the security Image: Control of the security Image: Control with the security Image: Control of the security Image: Control of the security Image: Control of the security Image: Control of the security Image: Control of the security Image: Control of of the security Image: Control of the security Image: Control of the security Image: Control of of the security Image: Control of the security Image: Control of the security Image: Control of the security Image: Control of the security Image: Control of the security Image: Control of the security Image: Control of the security Image: Control of the security Image: Control of the security Image: Control of the security Imag	RDP-Tcp Properties	×					
Remote Control Client Settings Network Adapter Security You can use remote control to remotely control or to view a user's session. Use remote control with default user settings Do not allow remote control Use remote control with the following settings: Require user's permission Level of control Use with the session Interact with the session 	General Log on Settings Sessions Environment	1					
You can use remote control to remotely control or to view a user's session.	Remote Control Client Settings Network Adapter Security						
Use remote control with default user settings Do not allow remote control Use remote control with the following settings: Bequire user's permission Level of control	You can use remote control to remotely control or to view a user's session.						
Do not allow remote control Uge remote control with the following settings: Bequire user's pemission Level of control Mew the session Interact with the session	C Use remote control with default user settings						
Use remote control with the following settings: Bequire user's permission Level of control <u>Vew the session</u> <u>interact with the session</u>	C Do not allow remote control						
Eequire user's permission Level of control <u>V</u> ew the session <u>ression</u> <u>ression</u>	Use remote control with the following settings:						
Level of control <u>Vew the session</u> <u>Interact with the session</u>	Require user's permission						
<u>View the session</u> Interact with the session	Level of control						
Interact with the session	C View the session						
	Interact with the session						
OK Cancel <u>Apply</u>	OK Cancel Apply						

Figure 11

7. Cliquez sur l'onglet **Réglages client**, puis effectuez les sélections indiquées sur la Figure 12.





8. Cliquez sur l'onglet **Autorisations**, puis effectuez les sélections indiquées (Figure 13) pour Utilisateurs du Bureau à distance, Utilisateurs de Terminal Server et Utilisateurs.

General Log on Settings Sessions Environment Remote Control Client Settings Network Adapter Securit Group or user names: Securit Securit Securit Mathematical Settings Network Adapter Securit Mathematical Settings Network Settings Securit Mathematical Settings Network Setings Securit </th <th>t ty</th>	t ty
LOCAL SERVICE NETWORK SERVICE User (XCMWEB-2008\User) Administrators (XCMWEB-2008\Administrators) Remote Desktop Users (XCMWEB-2008\Remote Desktop Users) INTERACTIVE	-
Add Remove Permissions for Remote Desktop Users Allow Deny Full Control Image: Control Image: Control User Access Image: Control Image: Control Guest Access Image: Control Image: Control Special permissions Image: Control Image: Control	_

Figure 13

- 9. Cliquez sur l'onglet **Environnement**, puis effectuez les sélections indiquées sur la Figure 14.
- 10. Cliquez sur **OK** pour enregistrer les paramètres et fermer la boîte de dialogue.

berniter.	Client Settings	Network Adapter	Security
General	Log on Settings	Sessions	Environment
Initial program			
C <u>D</u> o not allow desktop	v an initial program to b	e launched; always	show
<u>R</u> un initial p Connection	rogram specified by us or client	er profile and Remot	e Desktop
C Start the foll	owing program when t	he user logs on:	
Program pa	ath and file name:		
Start in:			

Figure 14

11. À l'aide de la console MMC (Microsoft Management Console), appliquez les paramètres indiqués dans les figures 15 et 16.

🚟 Console1 - [Console Root\Local Computer Policy\Co	ompu	ter Configuration \Administrative Templates \Windows	Components\Terminal Servic	es\Terminal Server\Remo 💶 🗖 🗙
🚟 Eile Action View Favorites Window Help				_ 8 ×
🗢 🔿 🙍 📰 📄 🔒 👔 💼				
🖃 👰 Computer Configuration		Setting	State	Actions
🕀 🚞 Software Settings		🗈 Limit maximum color depth	Not configured	Remote Session Environment
🕀 🚞 Windows Settings		Enforce Removal of Remote Desktop Wallpaper	Enabled	82.03 740/103 (3)
Administrative Templates		Remove "Disconnect" option from Shut Down dialog	Not configured	More Actions
🗄 🔛 Control Panel		Remove Windows Security item from Start menu	Not configured	Enforce Removal of Remote +
Network		E Set compression algorithm for RDP data	Not configured	1000 0000 00 00 00
Printers		E Start a program on connection	Not configured	More Actions
E System		Always show desktop on connection	Not configured	
Windows Components			17.0	
Active Directory Federation Services				
Activex Installer Service				
AutoBlay Belicies				
Backup				
Bitl ocker Drive Encryption				
Credential User Interface				
Desktop Window Manager				
Digital Locker				
Event Forwarding				
F Event Log Service				
Event Viewer				
Game Explorer				
Import Video				
🗉 🧮 Internet Explorer				
Internet Information Services				
NetMeeting				
Network Access Protection				
Network Projector				
Coline Assistance				
Parental Controls				
Password Synchronization				
Presentation Settings				
RSS Feeds				
Search				
Security Center				
Server for NIS				
Smart Card				
Sound Recorder				
Tablet PC				
Task Scheduler				
Remote Desktop Connection Client				
Terminal Server				
Connections				
📔 Device and Resource Redirectio	or			
C Licensing				
Printer Redirection				
Profiles				
🧮 Remote Session Environment	-			
		Extended A Standard		

Figure 15

Console1 - [Console Root\Local Computer Policy\User	Configuration\Administrative Templates\Control Panel\I	Display]	
🚟 Eile Action View Favorites Window Help			×
🗢 🔿 🞽 📷 🖬 🖻 🔒 🔽 📷			
🦰 Console Root	Setting	State	Actions
E J Local Computer Policy	Desktop Themes		Display 🔺
Computer Configuration Section	E Remove Display in Control Panel	Not configured Not configured	More Actions
	Hide Desktop tab	Not configured Not configured Disabled Not configured Not configured Not configured Not configured Not configured	Screen Saver
Administrative Templates Gontrol Panel	E Hide Screen Saver tab		More Actions
Add or Remove Programs Display Printers Programs Regional and Language Options Cashtop Network Shared Folders Start Menu and Taskbar System Windows Components	Standard Extended Standard Extended Standard Standard Extended Standard Stan		

Figure 16

- 12. Pour **Windows Server 2012 R2 ou Windows Server 2016**, dans l'écran Gestionnaire de serveur, cliquez sur Outils > Services Terminal Server (ou Services Bureau à distance) > Gestionnaire de passerelle Bureau à distance.
- 13. Mettez en surbrillance **Stratégies d'autorisation des connexions**, comme illustré dans la Figure 17, puis choisissez « Créer une stratégie ».

(b)	RD Gateway Manager	- 🗆 🗙
File Action View Help		
🔞 RD Gateway Manager	Connection Authorization Policies	Actions
 RD Gateway Manager XRGRCTX001D (Local) Policies Connection Authorization Policies Resource Authorization Policies Monitoring 	Connection Authorization Policies A Remote Desktop connection authorization policy (RD CAP) allows you to specify the users who can connect to this RD Gateway server. Order Policy (Applied in Order Listed) User Groups	Actions Connection Authorization Policies
	No connection authorization policies currently exist. To create a policy, in the Action pane, click Create	



14. Nommez la stratégie (par exemple, XCM Web), puis ajoutez les éléments indiqués dans les figures 18, 19 et 20.

New RD CAP	New RD CAP
General Requirements Device Redirection Timeouts	General Requirements Device Redirection Timeouts
Specify the requirements that users must meet to connect to the RD Gateway server.	Specify whether to enable or disable access to local client devices and resources in your remote session for clients that connect by using RD Gateway. RD Gateway device redirection should only be used for trusted clients running Remote
Supported Windows authentication methods: Image: Password Image: Smart card	Desktop Connection.
If you select both methods, either can be used to connect.	 Enable device redirection for all client devices
	Disable device redirection for the following client device types:
	✓ Drives
User group membership: (required)	Clipboard
MIS\Terminal Server Users Add Group	✓ Printers
	✓ Ports (COM and LPT only)
Remove	Supported Plug and Play devices
Client computer group membership: (optional)	
Add Group Remove	Only allow client connections to Remote Desktop Session Host servers that enforce RD Gateway device redirection
Summary of RD CAP settings:	
If the user is a member of any of the following user groups: MIS\Terminal Server Users If the client computer is a member of any of the following computer groups: Not applicable (no computer group is specified)	
OK Cancel Apply	OK Cancel Apply

Figure 18



Figure 19

Figure 20

Création d'utilisateurs X-RiteColor Master

- 1. Vous devez créer les utilisateurs de X-RiteColor Master à deux niveaux : l'utilisateur qui peut ouvrir une session sur l'ordinateur et l'utilisateur que vous créez dans X-RiteColor Master à l'aide de l'utilitaire Xadmin. Créez tout d'abord les utilisateurs de l'ordinateur.
- 2. Pour chaque utilisateur créé, cliquez avec le bouton droit sur son nom et sélectionnez Propriétés.



Figure 21

 Dans la boîte de dialogue Propriétés, cliquez sur l'onglet Membre de et ajoutez le groupe Utilisateurs du Bureau à distance comme indiqué dans la Figure 22.

	control	Terminal Servi	ices Profile	Dial-in
General	Member Of	Profile	Environment	Session
<u>M</u> ember of:				
Remote	e Desktop Users			
Sers Users				
		, Chances t	o a user's group m	embership
Add	<u>R</u> emove	Changes t are not eff user loss of	o a user's group m jective until the nex on	embership d time the
Add	<u> </u>	Changes t are not eff user logs of	o a user's group m jective until the nex nr.	embership t time the
Add	<u>B</u> emove	Changes t are not eff user logs o	o a user's group m iective until the nex on.	embership d time the

Figure 22

- Dans la boîte de dialogue Propriétés, cliquez sur l'onglet Environnement et définissez la section « Programme de démarrage » comme indiqué dans la Figure 23. Vous pouvez ignorer la section « Périphériques client », car elle est remplacée par les paramètres « Configuration des services Terminal Server ».
- 5. Cliquez sur **OK** pour enregistrer tous les paramètres et fermer la boîte de dialogue.

	Dili
Remote control Terminal Services Profile	Dial-in
General Member Of Profile Environment	Sessions
se this tab to compute the Terminal Services startup environ ettings override client-specified settings. Starting program Starting program Start the following program at logon: Program file name: "COReasen Files X BacCales Master WED EM2000 as	e"
["C:\Program Files\X-RiteColor Master WEB\FM2000.ex	e"
Start in:	
Client devices	
Client devices	
Client devices <u>C</u> onnect client drives at logon <u>Connect client printers at logon</u>	
Client devices <u>Connect client drives at logon</u> <u>Connect client printers at logon</u> <u>Default to main client printer</u>	
Client devices <u>Connect client drives at logon</u> <u>Connect client printers at logon</u> <u>Default to main client printer</u>	
Client devices Connect client drives at logon Connect client printers at logon Connect client printer	
Client devices Connect client drives at logon Connect client printers at logon Connect client printer	
Client devices Connect client drives at logon Connect client printers at logon Connect client printer Default to main client printer	
Client devices Connect client drives at logon Connect client printers at logon Connect client printer	

Figure 23

- 6. Après avoir créé les utilisateurs de l'ordinateur, exécutez l'utilitaire XAdmin en cliquant sur l'icône se trouvant sur le Bureau. L'écran Ouverture d'une session d'administration s'affiche, avec « admin » comme nom de l'utilisateur (sauf s'il a été changé précédemment).
- 7. Pour continuer, tapez password (en minuscules).
- 8. Cliquez sur **OK**.

Administrator Login	×
Server:	ОК
KRUMWEB	
Administrator User Name:	Cancel
admin	
Password:	



9. Lorsque X-Admin s'ouvre, cliquez sur l'onglet Gestion des utilisateurs.

XRCMWEB - X-Adm	in Database Administr	ator			
e view Loois Help					
atabase Permissions	Database Management	User Management	SpectroSync Permissions	User Group Management	
Existing Users:			. 1		
admin Administrator fmfull		<u>A</u> d	d1		
LanyLee ThomMichaels		Bem	ove		
User		Mo	lify		



10. Pour ajouter chaque utilisateur, sélectionnez son nom dans la liste, puis cliquez sur Ajouter. Dans l'exemple de la Figure 26, l'utilisateur « NormalUser » a été créé. Le mot de passe pour tous les utilisateurs doit toujours être « password ». Le nom de l'utilisateur entré ici doit correspondre exactement (même la casse) à l'utilisateur de l'ordinateur associé que vous avez défini précédemment.

base Permissions Database Management sting Users:	User Management	Spectro Sync Permissions	User Group Management	
min Iministrator full	<u>A</u> d	d		
nyLee omalUser iomMichaels	<u>R</u> em	ove		
er	<u>M</u> od	ify		



11. Cliquez sur l'onglet **Accès aux bases de données** pour attribuer à l'utilisateur les autorisations nécessaires.

, produktion i	. [
abase Permissions Database M	fanagement User Management Spectro	oSync Permissions Use	r Group Managem	ient
tabases:	Permissions:			
11	 Database Access 			
-				Formulation-Master III
s <u>e</u> rs :				,
admin	Database	Backup	Restore	
lormalUser	Transfer	In In	🔽 Out	
	Customers	Create	E dit	✓ Delete
	Standards	Create	🗹 Edit	✓ Delete
	Master Panels	Create	🗹 Edit	Delete
	Projects	Create	🗹 Edit	Delete
	General Tags	Create	🔽 Edit	Delete
	Category Tags	Create	🗹 Edit	Delete
	Jobs	Create	🗹 Edit	Download
	Samples	Delete	Delete Set	
	Standard Filters	Create	🗹 Edit	✓ Delete
	Sample Filters	Create	🗹 Edit	🔽 Delete
	Custom Reports	Create	🗹 Edit	🔽 Delete
	View Sets	Create	🗹 Assign	🔽 Delete
	Color Stability Config	Enabled		
	Short Term Drift Test	Enabled		
	Job Analysis	View		
	Calibration Values	Enabled		
	Calibration Sets	Create	🗹 Edit	Delete
	Suppliers	Create	🗹 Edit	🔽 Delete
	Formulation Options	Enabled		
	Trial Formula	Enabled	_	_
	Shade Libraries	Create	🗹 Edit	Delete
	Shade Colors	Create	🗹 Edit	Delete
	Formulation	Combinatorial	With Trial	
	Shade Library Formulation	Search	Correct	

12. Sous le champ **Niveau**, cliquez sur la liste déroulante et sélectionnez le niveau de l'application X-RiteColor Master auquel peut accéder l'utilisateur. Cette option pour l'édition Web doit être définie pour chaque utilisateur.

View Tools Help				
atabase Permissions Database Mar	nagement 🛛 User Management 🗍 Spectro	Sync Permissions Use	r Group Manager	nent
2atabases:	Permissions:			Level
CM1 🗾	Database Access			
Urane				Formulation-Master III
Users :				QA-Master I
admin	Database	Backup	Restore	UA-Master II Matalia DA
NormalUser	Transfer	In In	🗹 Out	Formulation-Master
	Customers	Create	🗹 Edit	Formulation-Master II
	Standards	Create	🔽 E dit	Formulation-Master III
	Master Panels	Create	🔽 Edit	✓ Delete
	Projects	🔽 Create	🗹 Edit	Delete
	General Tags	Create	🗹 Edit	🔽 Delete
	Category Tags	🔽 Create	🗹 Edit	Delete
	Jobs	Create	🔽 Edit	🔽 Download
	Samples	🔽 Delete	🔽 Delete Se	t
	Standard Filters	Create	🔽 Edit	🔽 Delete
	Sample Filters	Create	🗹 Edit	Delete
	Custom Reports	🗹 Create	🗹 Edit	Delete
	View Sets	🗹 Create	🗹 Assign	🔽 Delete
	Color Stability Config	Enabled		
	Short Term Drift Test	Enabled		
	Job Analysis	View		
	Calibration Values	Enabled		
	Calibration Sets	Create	🗹 Edit	Delete
	Suppliers	Create	🗹 Edit	Delete
	Formulation Options	Enabled		
	Trial Formula	Enabled	_	_
	Shade Libraries	Create	🗹 Edit	✓ Delete
	Shade Colors	Create	🗹 Edit	Delete
	Formulation	Combinatorial	With Trial	
	Shade Library Formulation	I ⊻ Search	Correct	
		1		A L

Figure 28

Autorisations de l'utilisateur

1. Ouvrez l'Explorateur Windows et accédez au répertoire X-RiteColor Master Web.

👔 X-RiteColor Master WEB					- 🗆 🗵
😋 🕞 🕨 🔹 Local Disk (C:) 🔹 Program Files 🔹	X-RiteColor Master WEB	• •	Search		
File Edit View Tools Help					
	um				W
Favorite Links	Name A	▼ Date modified ▼	Туре	▼ Size ▼ Tags	· · ·
D D D D D D D D D D D D D D D D D D D	A000 🕌	5/5/2011 1:35 PM	File Folder		
Documents	000C	5/5/2011 1:35 PM	File Folder		
Pictures	0007	5/5/2011 1:35 PM	File Folder		
Music	0009	5/5/2011 1:35 PM	File Folder		
More >>	0010	5/5/2011 1:35 PM	File Folder		
	0011	5/5/2011 1:35 PM	File Folder		
Folders V	0016	5/5/2011 1:35 PM	File Folder		
	0804	5/5/2011 1:35 PM	File Folder		
H Microsoft SQL Server Compact Edition	🍌 Config	5/5/2011 1:35 PM	File Folder		
Microsoft Sync Framework	📙 Data 1	5/5/2011 1:36 PM	File Folder		
Microsoft Synchronization Services	🔒 Data2	5/5/2011 1:36 PM	File Folder		
🕀 🍌 Microsoft Visual Studio	📙 Data3	5/5/2011 1:36 PM	File Folder		
🕀 🎍 Microsoft Visual Studio 9.0	🔒 Data5	5/5/2011 1:36 PM	File Folder		
🕀 🎍 Microsoft Works	Drivers	5/5/2011 1:36 PM	File Folder		
🛨 🍌 MSBuild	Excel1	5/5/2011 1:36 PM	File Folder		
🗉 📙 OpenOffice.org 3	Excel2	5/5/2011 1:36 PM	File Folder		
Packaged Programs	Excel3	5/5/2011 1:36 PM	File Folder		
Reference Assemblies	Excel5	5/5/2011 1:36 PM	File Folder		
Uninstall Information	FormulationSetups	9/14/2011 5:25 PM	File Folder		
Windows Mail	GS	5/5/2011 1:35 PM	File Folder		
Windows NT	Job 1	5/5/2011 1:58 PM	File Folder		
	Job2	5/5/2011 1:58 PM	File Folder		
	Job3	5/5/2011 1:58 PM	File Folder		
+ KITECOIOF Master WEB	Job 5	5/5/2011 1:58 PM	File Folder		
Zero G Registry	Que1	9/22/2011 2:52 PM	File Folder		
🕀 📙 ProgramData	Oue2	9/14/2011 4:21 PM	File Folder		
🕀 🍌 Users	Que5	9/14/2011 5:26 PM	File Folder		
🛨 🍌 Windows 💌	adm32 dll	1/28/1999 8·50 AM	Application Exte	81 KB	-

Figure 29

- 2. Cliquez avec le bouton droit sur le nom du répertoire et sélectionnez **Propriétés**.
- Cliquez sur l'onglet Sécurité et sélectionnez Utilisateurs. Cochez les autorisations Modifier et Écrire dans la colonne Autoriser pour Utilisateurs du Bureau à distance, Utilisateurs de Terminal Server et Utilisateurs. Cette opération est nécessaire pour que X-RiteColor Master puisse modifier les fichiers et dossiers appropriés au cours d'une utilisation normale.
- 4. Cliquez sur **OK** pour enregistrer les paramètres et fermer la boîte de dialogue.

X-RiteColor Mast	er WEB	Proper	ies		ļ
General Sharing	Security	Previou	s Versions	Customize	
Object name: C:\	Program	Files\X-F	liteColor Ma	ster WEB	
Group or user name:	s:				
& Users (XCMWE	B-2008	Users)			
& Remote Deskto	op Users	(XCMWI	EB-2008\Re	mote Deskto	pp
Rusted Installer					-
1					Ì
To obango pormissis	ana alial	Eda	1		
ro change permissio	Jris, clicr	C Eult.		<u>E</u> dit	
Permissions for Rem	ote Des	ctop	Allow	Dom	
			741044	Deny	-
Full control					-
Modify			\checkmark		
Read & execute			\checkmark		
List folder conten	ts		~		
Read			1		
Write			1		-
For special permission click Advanced.	ons or ad	lvanced s and permi	ettings, <u>ssions</u>	Ad <u>v</u> ance	d
	0	К	Cancel		pply

Figure 30

Procédure d'installation d'une imprimante

1. Affichez la boîte de dialogue Imprimantes et sélectionnez « Ajouter une imprimante » pour ajouter une imprimante locale. (Figure 31 ou Figure 32, selon le système d'exploitation).



2. Cliquez sur l'option « Ajouter une imprimante locale ». (Figure 33 ou Figure 34, selon le système d'exploitation).

hoo	ise a local or network printer
→	Add a local printer Use this option only if you don't have a USB printer. (Windows automatically installs USB printers when you plug them in.)
+	Add a network, wireless or Bluetooth printer Make sure that your computer is connected to the network, or that your Bluetooth or wireless printer is turned on.



		×
\leftarrow	🖶 Add Printer	
	Find a printer by other options	
	○ My printer is a little older. Help me find it.	
	○ Find a printer in the directory, based on location or feature	
	○ Select a shared printer by name	
	Browse	
	Example: \\computername\printername or http://computername/printers/printername/.printer	
	○ Add a printer using a TCP/IP address or hostname	
	○ Add a Bluetooth, wireless or network discoverable printer	
	Add a local printer or network printer with manual settings	
	Next Cancel	

Figure 34

3. Choisissez « Imprimer dans un fichier » pour le port de l'imprimante.

a 🖏	dd Printer			×
0	🚔 Add Printer			
	Choose a printer port			
	A printer port is a type of co printer.	nnection that allows your cor	nputer to exchange inform	nation with a
	• Use an existing port:	FILE: (Print to File)		•
	C Create a new port:			
	Type of port:	Local Port		7
			Next	Cancel

Figure 35

4. Sélectionnez le périphérique HP Color Laser Jet 2800 Series PS. Selon votre système, vous devrez peut-être choisir un pilote différent. Malheureusement, aucun pilote standard ne fonctionne sur tous les systèmes. Il doit s'agir toutefois d'un pilote d'imprimante PostScript (PS).

Install the printer driver		
Select the manufacturer a disk, click Have Disk. If y	and model of your printer. If your printer came with an installation our printer is not listed, consult your printer documentation for	
compatible printer softwar	e.	
Manufacture	1 Distant	
	HP Color Logar lat 2005/2005dp /2005dtp PS	
Generic	HP Color Laser let 2003/200301/2003011/PS	
Gestetner	HP Color Laser let 2000 Series 1 5	
	HP Color Laser let 2000 PS	
	HP Color Laser lat 2700 PCL 5	
IDM T		
	Windows Undeta Undeta	
IDM V		

Figure 36

5. Nommez l'imprimante PSFILE et définissez-la comme imprimante par défaut.

a 🚓	ld Printer	×	
\bigcirc	Add Printer		
	Type a printer	name	
	Printer name:	PSFILE	
		Set as the default printer	
This printer will be installed with the HP Color Laser Jet 2800 Series PS driver.			
		Next Cancel	

Figure 37

6. Ne partagez pas l'imprimante.

Francer Sharing	
If you want to shar name or type a new	e this printer, you must provide a share name. You can use the suggested one. The share name will be visible to other network users.
• Do not share th	is printer
C Share this printe	er so that others on your network can find and use it
Share name;	PSFILE
Location:	
Comment:	

Figure 38

Procédure d'installation des ordinateurs clients

- 1. Accédez au dossier « Client Install » sur le CD de distribution.
- 2. Exécutez le fichier exécutable « X-RiteColor Master Client vX.X.exe » sur chaque ordinateur client qui accédera à X-RiteColor Master Web Edition. Le client est configuré et un raccourci permettant d'exécuter X-RiteColor Master à partir du serveur est placé sur le Bureau. Il existe aussi une installation en mode silencieux (« XRCM Client Silent Install vX.X.exe ») que vous pouvez utiliser pour automatiser l'installation à l'aide de scripts ou d'autres outils administratifs disponibles.