X-RiteColor® Master Web Edition

O presente documento contém instruções de instalação do X-RiteColor Master Web Edition. Favor seguir todas as instruções cuidadosamente na ordem fornecida. Antes de prosseguir, verifique se foram instalados o Windows Server 2008 (R2), o 2012 (R2) ou o 2016 e se os Serviços de Área de Trabalho Remota (Serviços de Terminal) estão em execução. Esse servidor deverá ser designado somente como Servidor do X-RiteColor Master e não poderá ser utilizado para outras finalidades. Também não deverá pertencer a nenhum outro domínio a fim de evitar que as configurações dos domínios interfiram com a operação adequada desse servidor. Se o servidor estiver protegido por uma 'firewall', as portas TCP 3389 (ou 3391 se estiver utilizando UDP) deverão estar com acesso liberado através da 'firewall'.

Verifique se o Windows Server 2008 (R2) foi instalado e configurado com as "Funções de Servidor" conforme mostrado abaixo (Figura 1). Verifique se o Windows Server 2012 (R2) ou o Windows Server 2016 foi instalado e configurado com as "Funções de Servidor" conforme mostrado abaixo (Figura 2).



Figura 1

B		Server Manager	- 🗆 🗙
E	Servers	- 🕝 🍢 Manage Tool	s View Help
	Overview	SERVERS All servers 1 total	TASKS 💌
i İii	Servers	Filter ρ $(ii) \bullet$ $(ij) \bullet$	\odot
		Server Name IPv4 Address Manageability Last Update	Windows
		XRGRRCTX001D 10.27.148.159 Online - Performance counters not started 8/4/2021 9:46:3	0 AM 00252-70
iii ⊳ Iiii			
₽ ⊗ ⊳			
		<	>
		EVENTS	TACKS
		All events 2 total	
		Server Name ID Severity Source	Log
		XRGRRCTX001D 20499 Warning Microsoft-Windows-TerminalServices-RemoteConnection	nManager Micro
		XRGRRCTX001D 20499 Warning Microsoft-Windows-TerminalServices-RemoteConnection	1Manager Micro
		<	>
		All services 3 total	TASKS 💌
		Filter 👂 🔠 🕶 🗎 🕶	\odot
		Server Name Display Name Service Name Status Start Type	
		XKGKKC1XUU1D Remote Desktop Services TermService Running Manual XRGRRCTX001D Remote Desktop Licensing TermServLicensing Running Automatic	
		XRGRRCTX001D Remote Desktop Gateway TSGateway Running Automatic ()elayed Start)



Atualizar Instalação

Se você estiver atualizando uma versão instalada anteriormente, certifique-se de que todos os usuários do X-RiteColor Master Web Edition tenham se desconectado. Inicie sessão no servidor *como Administrador* e instale o X-RiteColor Master Web Edition. Para o Windows Server 2008 (R2), use o procedimento Instalar o Aplicativo no Servidor de Terminais encontrado na seção Programas do Painel de Controle (Figura 3). Para o Windows Server 2012 (R2) ou para o Windows Server 2016, use o procedimento Instalar o Aplicativo ou o Servidor de Área de Trabalho Remota na seção Programas do Painel de Controle (Figura 4).



Figura 3



Figura 4

Isso coloca o servidor automaticamente no modo de instalação (Figura 5), o que se exige ao instalar programas nos Serviços de Terminais. Aceite todos os parâmetros predefinidos durante a instalação.

Install Program From Flo	ppy Disk or CD-ROM
	Insert the product's first installation floppy disk or CD-ROM, and then click Next. The application will be installed in TS-Install mode. What is TS-Install mode?
	< <u>B</u> ack <u>N</u> ext > Cancel

Figura 5

Logo antes de completar a instalação da atualização, o sistema mostrará a tela de Início de Sessão como Administrador, com o **Nome de Usuário do Administrador** configurado para "admin" (Figura 6).

- Para prosseguir, digite a sua senha atual de *admin* (se não configurada especificamente, a senha predefinida é "password").
- 2. Clique em OK.
- 3. Clique em Concluir.

Administrator Login	×
Server: XRCMWEB	ок
Administrator User Name: admin	Cancel
Password:	

Figura 6

Nova Instalação e Configuração de Usuários

A primeira tarefa do processo de instalação consiste em instalar o X-RiteColor Master Web Edition no servidor. Inicie sessão no servidor *como Administrador* e instale o X-RiteColor Master Web Edition. Aceite todos os parâmetros predefinidos durante a instalação.

Licenciamento do Produto

É necessário ativar e licenciar o X-RiteColor Master antes de poder executá-lo.

- Clique duas vezes no ícone Ativar na Área de Trabalho. Essa operação fará surgir a caixa de diálogo Ativar (Figura 7).
- 2. Selecione o produto que você comprou e clique em OK.

Activate	×
QA Edition	ОК
○ QA Edition + Spectro Sync [™]	Cancel
Formulation Edition	
C Formulation Edition + SpectroSync™	

Figura 7

3. Na tela de registro resultante (Figura 8), digite a chave de licença e clique em Licença.

OU

clique no localizador para fazer o registro eletrônico.

License Status:	LICENSED				
Dechae Status.	1	Continue			
If you have internet access, write down the Registration Code below and click the following link to register online and obtain your License Key via e-mail.					
Click here to Register Online					
OR Contact X-Rite Applications Support at 888-826-3046 (Option #2) or refer to the materials included with your software for Licensing instructions.					
or refer to the materia instructions.	als included with your soft	ware for Licensing			
or refer to the materia instructions. License Key:	Is included with your soft	ware for Licensing			

Figura 8

Parâmetros de Configuração dos Serviços de Terminais / Área de Trabalho Remota

- 1. Para o **Windows Server 2008 (R2)**, a partir do menu Iniciar do Windows, selecione Programas Ferramentas Administrativas Serviços de Terminais Configurações de Serviços de Terminais.
- No diálogo Configuração dos Serviços de Terminais, faça as seleções conforme ilustrado na Figura 9.

Marminal Services Configurat	ion					
<u>File Action View H</u> elp						
🗢 🔿 📰 🛛 📅						
Terminal Services Configuration:	Configuration	n for terminal se	erver:			Actions
o Licensing Diagnosis	XCMWEB-200	8				Terminal Ser 🔺
	You can use Termina	Services Configuration to	configure sett	ings for new connecti	ons modify the settings of existin	Create N
	and delete connection	ns. You can configure sett	tings on a per-	connection basis, or fo	or the terminal server as a whole.	Refresh
					Connect	
	Connections					View +
	Connection Name	Connection Type	Transport	Encryption	Comment	Relp
		MICrosoft NDF 6.1	tcp	Client Compatible		Connection N A
	1					Help
					-00	
	Edit settings					
	General					
	Delete temporary	folders on exit	Yes			
	Use temporary fol	ders per session	Yes			
	Restrict each use	r to a single session	Yes			
	User logon mode		Allow all	connections		
	Licensing					
	License server dis	covery mode	Automat	ic		
	Terminal Services	licensing mode	Per Dev	ice		
	TS Session Brok	er				
	Member of farm in	TS Session Broker	No			

Figura 9

- Clique com o botão direito do rato no item RDP-Tcp na seção Conexões e selecione o item Propriedades.
- 4. No diálogo Propriedades, altere as configurações nas guias Sessões, Controle Remoto e Configurações do Cliente, conforme ilustrado nas figuras a seguir.

5. Clique na aba **Sessões** e faça as seleções mostradas na Figura 10.

Qvemde user settings End a disconnected session: 1 minute Active session limit: Idle session limit: Jahours Oyenide user settings When session limit is reached or connection is broken:				
Agtive session limit: Never	Overnde us End a disco	er settings onnected session:	1 minute	<u>-</u>
Idle session limit: 3 hours ✓ Override user settings When session limit is reached or connection is broken:	Active sess	sion limit:	Never	•
 Override user settings When session limit is reached or connection is broken: 	<u>I</u> dle sessior	n <mark>limi</mark> t:	3 hours	-
Disconnect from session	✓ Override us When sess ○ Disconr	er settings ion limit is reached (nect from session	or connection is broken:	

Figura 10

6. Clique na aba **Controle Remoto** e faça as seleções mostradas na Figura 11.

DP-Tcp Properties									
General	Log on Settings	Sessions	Environment						
Remote Control	Client Settings	Network Adapter	Security						
You can use re session.	You can use remote control to remotely control or to view a user's session.								
O <u>U</u> se remote	C Use remote control with default user settings								
O Do not allow	C Do not allow remote control								
Use remote	Use remote control with the following settings:								
Require	Require user's permission								
Level of o	Level of control								
C <u>V</u> iew	O View the session								
Inter	Interact with the session								
	ОК	Cancel	Apply						

Figura 11

7. Clique na aba **Configurações do Cliente** e faça as seleções mostradas na Figura 12.

General Log on Settings	Sess	ons	Environment
Remote Control Client Settings	Netw	ork Adapter	Security
Color Depth			
Limit Maximum Color Depth			
24 bits per pixel	•		
Redirection			
Disable the following			
Windows Printer			
LPT Port			
COM Port			
Clipboard			
Audo Audo			
Supported Plug and Play Devic	ies.		
Default to main client printer			

Figura 12

 Clique na aba **Permissões** e faça as seleções mostradas (Figura 13) para os itens Usuários de Área de Trabalho Remota, Usuários de Servidores de Terminais e Usuários.

General	Log on Settings	Sessions	Environment				
Remote Control	Client Settings	Network Adapte	r Security				
roup or user na	mes:						
& LOCAL SEP	RVICE						
Server NETWORK	SERVICE						
Luser (XCMWEB-2008\User)							
Administrators (XCMWEB-2008 Administrators)							
MINTERACT	IVE	2000 memore Desi	(top osers)				
			-				
		Add	Remove				
			_				
ermissions for F	Remote Desktop Users	Allow	Deny				
Full Control							
Full Control User Access							
Full Control User Access Guest Access							
Full Control User Access Guest Access Special permis	ssions						
Full Control User Access Guest Access Special permis	ssions						
Full Control User Access Guest Access Special permis	ssions						
Full Control User Access Guest Access Special permis	ssions ssions or advanced set	ttings, click	Adyanced				
Full Control User Access Guest Access Special permis or special permi dvanced.	ssions ssions or advanced set	ttings, click	Advanced				
Full Control User Access Guest Access Special permis or special permi dvanced.	ssions ssions or advanced set ess control and permiss	ttings, click	Adyanced				

Figura 13

- 9. Clique na aba **Ambiente** e faça as seleções mostradas na Figura 14.
- 10. Clique em OK para salvar as configurações e fechar a caixa de diálogo.

	Client Settings	Network Adapter	Securit
General	Log on Settings	Sessions	Environment
Initial program			
C <u>D</u> o not allow desktop	v an initial program to b	be launched; always	show
Run initial p Connection	rogram specified by us or client	er profile and Remot	e De <mark>s</mark> ktop
C Start the foll	owing program when t	the user logs on:	
Program pa	ath and file name:		
Start in:			
S <u>t</u> art in:			
Start in:			
Start in:			

Figura 14

11. Usando o Console de Gerenciamento Microsoft (mmc), aplique as configurações conforme ilustrado nas Figuras 15 e 16.

Console1 - [Console Root\Local Computer Policy\Con	npu	ter Configuration\Administrative Templates\Windows Co	omponents\Terminal Servic	es\Terminal Server\Remo 💶 🗵
Eile Action View Favorites Window Help				X
	-	[Chata I	
E Computer Computation	_	Secong	State	Actions
Windows Settings	_	E Limit maximum color depth	Not configured	Remote Session Environment
Administrative Templates		Enforce Removal of Remote Desktop Wallpaper	Enabled	More Actions
Administrative remplates		E Remove "Disconnect" option from Shut Down dialog	Not configured	Plote Actions
		E Remove Windows Security item from Start menu	Not configured	Enforce Removal of Remote
Printers		E Set compression algorithm for RDP data	Not configured	More Actions
F System		E Start a program on connection	Not configured	Profe Predons
E Components		E Always show desktop on connection	Not configured	
Active Directory Federation Services				
ActiveX Installer Service				
Application Compatibility				
AutoPlay Policies				
Backup				
BitLocker Drive Encryption				
Credential User Interface				
🕂 🦳 Desktop Window Manager				
Digital Locker				
Event Forwarding				
🕂 🧮 Event Log Service				
Event Viewer				
Game Explorer				
Import Video				
F Internet Explorer				
Internet Information Services				
NetMeeting				
Network Access Protection				
Network Projector				
Online Assistance				
Parental Controls				
Password Synchronization				
Presentation Settings				
RSS Feeds				
Search				
Security Center				
Server for NIS				
Shutdown Options				
Smart Card				
Sound Recorder				
🕀 🧮 Tablet PC				
Task Scheduler				
🖃 🧮 Terminal Services				
📔 Remote Desktop Connection Client				
🖃 🧮 Terminal Server				
Connections				
📔 Device and Resource Redirection				
📔 Licensing				
Printer Redirection				
C Profiles				
🧮 Remote Session Environment	-			
•		Extended Standard		

Figura 15

Console1 - [Console Root\Local Computer Policy\U Ele Action View Favgrites Window Help	ser Configuration\Administrative Templates\Control P	anel\Display]		
Console Root Control Panel Administrative Templates Control Panel	Setting Desktop Themes Remove Display in Control Panel Hide Appearance and Themes tab Hide Settings tab Screen Saver Screen Saver Screen Saver executable name Password protect the screen saver Screen Saver timeout Prevent changing wallpaper Extended Standard	State Not configured Not configured Not configured Not configured Disabled Not configured Not configured Not configured Not configured	Actions Display More Actions Screen Saver More Actions	- - - -



- 12. Para o **Windows Server 2012 (R2)** ou o **Windows Server 2016**, a partir da tela Gerenciador de Servidores, clique em Ferramentas Serviços de Terminais (ou em Serviços de Área de Trabalho Remota) Gerenciador de Portão de Acesso a Área de Trabalho Remota.
- 13. Selecione o item **Políticas de Autorização de Conexão** conforme mostrado na Figura 17 e escolha o item "Criar Nova Política".

6	RD Gateway Manager	- 🗆 🗙
File Action View Help		
🔞 RD Gateway Manager	Connection Authorization Policies	Actions
 RD Gateway Manager RERCTX001D (Local) Policies Connection Authorization Policies Resource Authorization Policies Monitoring 	Connection Authorization Policies A Remote Desktop connection authorization policy (RD CAP) allows you to specify the users who can connect to this RD Gateway server. Order Policy (Applied in Order Listed) User Groups A model of the server	Actions Connection Authorization Policies * Create New Policy Configure Central RD CAP View Refresh Help

14. Dê um nome à política (tal como: XCM Web) e adicione os itens conforme mostrado nas Figuras 18, 19 e 20.

New RD CAP	New RD CAP
General Requirements Device Redirection Timeouts	General Requirements Device Redirection Timeouts
Specify the requirements that users must meet to connect to the RD Gateway server.	Specify whether to enable or disable access to local client devices and resources in your remote session for clients that connect by using RD Gateway. RD Gateway device redirection should only be used for trusted clients running Remote
Supported Windows authentication methods:	Desktop Connection.
If you select both methods, either can be used to connect.	Enable device redirection for all client devices
	Disable device redirection for the following client device types:
	✓ Drives
User group membership: (required)	Clipboard
MIS\Terminal Server Users Add Group	✓ Printers
Baser	✓ Ports (COM and LPT only)
Remove	Supported Plug and Play devices
Client computer group membership: (optional)	
Add Group	Only allow client connections to Remote Desktop Session Host servers that enforce RD Gateway device redirection
Remove	
Summary of RD CAP settings:	
If the user is a member of any of the following user groups: MISVTeminal Server Users If the client computer is a member of any of the following computer groups: Not annlicable (no computer group is specified)	
OK Cancel Apply	OK Cancel Apply

Figura 18



Figura 19

Figura 20

Criar Usuários do X-RiteColor Master

- Será necessário criar os usuários do X-RiteColor Master em dois níveis: o usuário que pode iniciar sessão no computador e o usuário criado dentro do X-RiteColor Master por meio do utilitário X-Admin. Em primeiro lugar, crie os usuários do computador.
- 2. Para cada usuário criado, clique com o botão direito do rato no nome do usuário e selecione o item **Propriedades**.



Figura 21

 No diálogo Propriedades, clique na aba Membro de e adicione o grupo Usuários da Área de Trabalho Remota conforme mostrado na Figura 22.

maioserri	operties			?
Remote c	ontrol	Terminal Servi	ces Profile	Dial-in
General	Member Of	Profile	Environment	Sessions
Wender of . Remote	Desktop Users			
		Changes t		
A <u>d</u> d	<u>R</u> emove	are not eff	ective until the nex	embership t time the

Figura 22

- No diálogo Propriedades, clique na aba Ambiente e configure a seção "Programa inicial" conforme mostrado na Figura 23. Pode ignorar a seção "Dispositivos clientes" porque ela é anulada pelos parâmetros das "Configurações dos Serviços de Terminais".
- 5. Clique em **OK** para salvar todas as configurações e fechar a caixa de diálogo.

	<u>?</u>
Remote control Terminal Services Profile	Dial-in
General Member Of Profile Environment	Sessions
se this tab to configure the Terminal Services startup environ ettings override client-specified settings. Starting program Start the following program at logon:	ment. These
Program file name:	
"C:\Program Files\X-RiteColor Master WEB\FM2000.exe	e"
Start in:	
Client devices	
Client devices	
Client devices Image: Connect client drives at logon Image: Connect client drives at logon	
Client devices Image: Connect client drives at logon Image: Connect client printers at logon Image: Connect client printers at logon Image: Connect client printers at logon	
Client devices Connect client drives at logon Connect client printers at logon Connect client printer	
Client devices Image: Connect client drives at logon Image: Connect client printers at logon Image: Connect client printer Image: Connect client printer	
Client devices Connect client drives at logon Connect client printers at logon Connect client printer Default to main client printer	
Client devices Connect client drives at logon Connect client printers at logon Connect client printer Default to main client printer	
Client devices Connect client drives at logon Connect client printers at logon Connect client printer Default to main client printer	
Client devices Connect client drives at logon Connect client printers at logon Default to main client printer	

Figura 23

- 6. Após criar os usuários do computador, execute o utilitário Xadmin utilizando o ícone na área de trabalho. Aparecerá a tela Início de Sessão do Administrador com o nome do usuário configurado como "admin" (a não ser que tenha sido modificado anteriormente).
- 7. Para continuar, digite senha (tudo em letras minúsculas).
- 8. Clique em OK.

Administrator Login	×
Server:	ОК
XHUMWEB	
Administrator User Name:	Cancel
admin	
Password:	



9. Ao aparecer o X-Admin, vá até a guia Gerenciamento de Usuários.

XRCMWEB - X-Adm View Tools Help	in Database Administr	ator			_10
2					
Database Permissions	Database Management	User Management	SpectroSync Permissions	User Group Management	
Existing Users:			1		
admin Administrator fmfull		<u>A</u> d	ld		
LanyLee ThomMichaels		<u>R</u> em	ove		
User		Mod	dify		



10. Para adicionar os usuários um a um, selecione na lista o nome do usuário e clique em Adicionar. No exemplo da Figura 26, foi criado um usuário denominado "UsuárioNormal". A senha para todos os usuários sempre deverá ser configurada como "senha". O nome do usuário aqui inserido deverá coincidir exatamente (incluindo as letras maiúsculas/minúsculas) com o nome do usuário associado do computador configurado anteriormente.

RCMWEB - X-Admin Database Administrator Ele View Iools Help	
Image: State Permissions Database Management User N Existing Users: Administator Administator Image: State St	anagement SpectroSync Permissions User Group Management Add Bernove Modify



11. Clique na aba Permissões da Base de Dados para atribuí-las a este usuário, conforme necessário.

tabase Permissions Database Mar	nagement User Management Spectro	Sync Permissions Use	r Group Managem	ent
atabases:	Permissions:			denormal and a second
M1 💌	Database Access			Level:
				Formulation-Master III
Jsers :	1			-
admin	Database	R Paskup	Destara	
NormalUser	Transfer		IV Nestore	
	Customers	Create	E Edit	Delete
	Standards	Create	E Edit	✓ Delete
	Master Panels	Create	Edit	✓ Delete
	Projects	Create	Edit	✓ Delete
	General Tags	Create	Edit	✓ Delete
	Category Tags	Create	🗹 Edit	Delete
	Jobs	Create	🔽 Edit	Download
	Samples	Delete	Delete Set	
	Standard Filters	Create	🔽 Edit	Delete
	Sample Filters	Create	🗹 Edit	Delete
	Custom Reports	Create	🗹 Edit	Delete
	View Sets	Create	Assign	Delete
	Color Stability Config	Enabled		
	Short Term Drift Test	Enabled		
	Job Analysis	View		
	Calibration Values	Enabled	_	_
	Calibration Sets	Create	🗹 Edit	✓ Delete
	Suppliers	Create	🗹 Edit	I Delete
	Formulation Options	Enabled		
	I rial Formula	IM Enabled		E o u
	Shade Libraries	I Lreate	IM Edit	IM Delete
	Shade Lolors	IM Lreate	M Edit	IM Delete
	Formulation	Combinatorial	With Trial	
	Spage Uprary Formulation	M bearch	foering Lorrect	



 Clique na seta para baixo referente ao campo Nível e determine o nível de acesso permitido ao usuário do X-RiteColor Master. Esta opção do Web Edition precisa ser configurada para cada um dos usuários.

XRCMWEB - X-Admin Database Ad File View Tools Help	ministrator			
?				
B Database Permissions Database Mana Databases: DM1 ▼ Users : admin NormalUser	pement User Management Spectro Permissions: I Database Access Database Transfer Customers Standards Master Panels	Sync Permissions User ♥ Backup ♥ In ♥ Create ♥ Create ♥ Create	Group Managerr Restore Cut Edit Edit Edit	Level: Formulation-Master III QA-Master II Ad-Master II Formulation-Master II Formulation-Master II Formulation-Master II Formulation-Master II Formulation-Master III Formulation-Master III Metality Delete
	Projects General Tags Category Tags Jobs Samples Standard Filters Casple Filters Custom Reports View Sets Color Stability Config Short Term Drift Test Job Analysis	✓ Create ✓ Create	Edit Edit Edit Edit Edit Edit Edit Edit	☑ Delete
	Calibration Values Calibration Sets Suppliers Formulation Options Trial Formula Shade Libraries Formulation Formulation Shade Library Formulation	Enabled Create Create Enabled Enabled Create Create Create Create Create Combinatorial Search	 ✓ Edit ✓ Edit ✓ Edit ✓ Edit ✓ Vith Trial ✓ Correct 	I Delete I Delete I Delete I Delete I Delete
	Check All Clear All			Apply

Figura 28

Permissões de Usuários

1. Abra o Windows Explorer e vá até o diretório (pasta) do X-RiteColor Master Web.

👔 X-RiteColor Master WEB					
😋 🕞 🕨 🔹 Local Disk (C:) 🔹 Program Files 🔹	X-RiteColor Master WEB	• •	Search		
File Edit View Tools Help					
	rp.				
	m				U
Favorite Links	Name A	▼ Date modified ▼	Туре	▼ Size ▼ Tags	▲
Decimenta	A000	5/5/2011 1:35 PM	File Folder		
Documents	000C	5/5/2011 1:35 PM	File Folder		
Pictures	0007	5/5/2011 1:35 PM	File Folder		
🕑 Music	0009	5/5/2011 1:35 PM	File Folder		
More >>	0010	5/5/2011 1:35 PM	File Folder		
	0011	5/5/2011 1:35 PM	File Folder		
Folders 🗸	0016	5/5/2011 1:35 PM	File Folder		
Microsoft SOL Server Compact Edity	0804	5/5/2011 1:35 PM	File Folder		
Microsoft Syc Server Compact Edite	onfig Config	5/5/2011 1:35 PM	File Folder		
HIGTOSOFT SYNC Framework	🍌 Data 1	5/5/2011 1:36 PM	File Folder		
Microsoft Synchronization Services	🍌 Data2	5/5/2011 1:36 PM	File Folder		
🕀 🦺 Microsoft Visual Studio	🍌 Data3	5/5/2011 1:36 PM	File Folder		
🛨 🍌 Microsoft Visual Studio 9.0	📕 Data5	5/5/2011 1:36 PM	File Folder		
🕀 🍌 Microsoft Works	Drivers	5/5/2011 1:36 PM	File Folder		
🕀 🍌 MSBuild	Excel1	5/5/2011 1:36 PM	File Folder		
🕀 🍌 OpenOffice.org 3	Excel2	5/5/2011 1:36 PM	File Folder		
Packaged Programs	Excel3	5/5/2011 1:36 PM	File Folder		
THE Reference Assemblies	Excel5	5/5/2011 1:36 PM	File Folder		
Uninstall Information	FormulationSetups	9/14/2011 5:25 PM	File Folder		
Windows Mail	GS	5/5/2011 1:35 PM	File Folder		
Windows NT	Job 1	5/5/2011 1:58 PM	File Folder		
	Job2	5/5/2011 1:58 PM	File Folder		
	Job3	5/5/2011 1:58 PM	File Folder		
	Job5	5/5/2011 1:58 PM	File Folder		
Jero G Registry	Que1	9/22/2011 2:52 PM	File Folder		
🛨 🌉 ProgramData	Que2	9/14/2011 4:21 PM	File Folder		
🕀 📗 Users	Que5	9/14/2011 5:26 PM	File Folder		
🛨 🍌 Windows 💌	adm32 dll	1/28/1999 8·50 AM	Application Exte	81 KB	-

Figura 29

- 2. Clique com o botão direito do rato no nome do diretório e selecione o item **Propriedades**.
- Clique na aba Segurança e selecione Usuários. Assinale as permissões Modificar e Escrever na coluna Permitir para os itens Usuários da Área de Trabalho Remota, Usuários de Servidores de Terminais e Usuários. Isso é necessário porque o X-RiteColor Master precisa ter permissão para alterar arquivos e pastas durante operação normal.
- 4. Clique em **OK** para salvar as configurações e fechar a caixa de diálogo.

🐌 X-RiteColor Master WEB Properties		×
General Sharing Security Previous Ver	rsions Customize	
Object name: C:\Program Files\X-RiteC	olor Master WEB	
Group or user names:		
& Users (XCMWEB-2008\Users)		•
Remote Desktop Users (XCMWEB-2	008\Remote Desktop	
StrustedInstaller	-	-
•	I I	-
To change permissions, click Edit.	<u>E</u> dit	
<u>P</u> ermissions for Remote Desktop Users	Allow Deny	-
Full control		-
Modify	~	
Read & execute	~	
List folder contents	~	
Read	~	
Write	1	-
For special permissions or advanced settin click Advanced.	gs. Advanced	
Learn about access control and permission	<u>18</u>	
ОК	Cancel Appl	у



Procedimento de Instalação de Impressora

1. Acesse o diálogo Impressoras e selecione o item "Adicionar uma impressora" para adicionar uma impressora local. (Figura 31 ou Figura 32, dependendo do sistema operacional)



 Clique na opção "Adicionar uma impressora local". (Figura 33 ou Figura 34, dependendo do sistema operacional)

Choose a local or network printer				
•	Add a local printer Use this option only if you don't have a USB printer. (Windows automatically installs USB printers when you plug them in.)			
+	Add a network, wireless or Bluetooth printer Make sure that your computer is connected to the network, or that your Bluetooth or wireless printer is turned on.			



		×
÷	🖶 Add Printer	
	Find a printer by other options O My printer is a little older. Help me find it.	
	O Find a printer in the directory, based on location or feature	
	○ Select a shared printer by name	
	Browse	
	Example: \\computername\printername or http://computername/printers/printername/.printer	
	○ Add a printer using a TCP/IP address or hostname	
	○ Add a Bluetooth, wireless or network discoverable printer	
	Add a local printer or network printer with manual settings	
	Next Cancel	

Figura 34

3. Escolha o item "Imprimir para Arquivo" para a porta da impressora.

a 😓	dd Printer				×
Θ	🖶 Add Printer				
	Choose a printer port				
	A printer port is a type of con printer.	nection that allows y	our computer to e	exchange information	n with a
	• Use an existing port:	FILE: (Print to Fi	le)		•
	C Create a new port:				
	Type of port:	Local Port			7
				Next	Cancel

Figura 35

4. Selecione o dispositivo HP Color Laser Jet 2800 Series PS. Dependendo do sistema, poderá ser necessário escolher outro controlador. Infelizmente, não existe um controlador padrão que funcione em todos os sistemas. O único requisito é que seja um controlador de impressora PostScript (PS).

🚱 🖶 Add Printer	
	2
Install the printer driver	
Select the manufacturer and model of your printer. If your printer came with an installation disk, click Have Disk. If your printer is not listed, consult your printer documentation for compatible printer software.	
Manufacturer Printers]
Fujitsu	1
Gestetner PC Color LaserJet 3000	
HP HP Color LaserJet 3000 PS	
🞲 This driver is digitally signed. Windows Update Have Disk	
Tell me why driver signing is important	
Nevt Conc	. 1

Figura 36

5. Denomine a impressora como PSFILE e configure-a como a impressora predefinida.

a Ad	ld Printer	×	1
\bigcirc	🖶 Add Printer		
	Type a printer i	name	
	Printer name:	PSFILE	
		Set as the default printer	
	This printer will be	installed with the HP Color LaserJet 2800 Series PS driver.	
			I
		Next Cancel	

Figura 37

6. Não compartilhe a impressora.

Printer Sharing				
If you want to share	this printer, you must p	rovide a share name	e. You can use the	suggested
name or type a new	one. The share hame wi		HE WORK USERS.	
O not share this	s printer			
C Share this printe	r so that others on your	network can find ar	d use it	
Share name;	PSFILE			
Location:				
Comment:				

Figura 38

Procedimento de Instalação do Computador Cliente

- 1. Navegue para a pasta denominada "Client Install" no CD da distribuição.
- 2. Execute o arquivo "X-RiteColor Master Client vX.X.exe" em cada computador cliente que irá acessar o X-RiteColor Master WEB Edition. Isso configurará o cliente e colocará um atalho na área de trabalho, o qual será utilizado para executar o X-RiteColor Master a partir do Servidor. Há também uma versão denominada "Instalação Silenciosa" ("XRCM Client Silent Install vX.X.exe") que pode ser utilizada para automatizar a instalação por meio de scripts ou de outras ferramentas administrativas disponíveis.