


GETTING CONNECTED – Standalone Configuration


These instructions are designed to get you up and running as quickly as possible. Please refer to the documentation that accompanied your system for further information on setting up the system, software installation and operation.

IntelliTrax2TM

- ❶ Connect the vacuum hose to the vacuum pump input and to the side of the docking station.
 - ❷ Connect the vacuum cable to the vacuum pump control box and to the back of the docking station.
 - ❸ Set the voltage switch on the control box to the proper line voltage for your region. Plug the line cord into the control box.
 - ❹ Plug one end of the Ethernet crossover cable into the USB to Ethernet adapter, and then plug the adapter into a USB port on your computer. Plug the other end of the Ethernet crossover cable into the docking station.
- NOTE:** The IntelliTrax hardware default IP address is as follows:
IP Address: 172.16.1.100
SubNet Mask: 255.255.0.0
Default Gateway: 172.16.1.1
To use the system as a standalone configuration you must set the computers TCP/IP to the following:
IP Address: 172.16.1.1
SubNet Mask: 255.255.0.0
The Default Gateway should NOT be set.
- ❺ Plug the input connector from the 24V power supply (P/N AT3-109) into the back of the docking station. Plug the line cord into the power supply.
 - ❻ **Optional foot switch** - Connect the foot switch interface cable into the back of the docking station (DB-9).

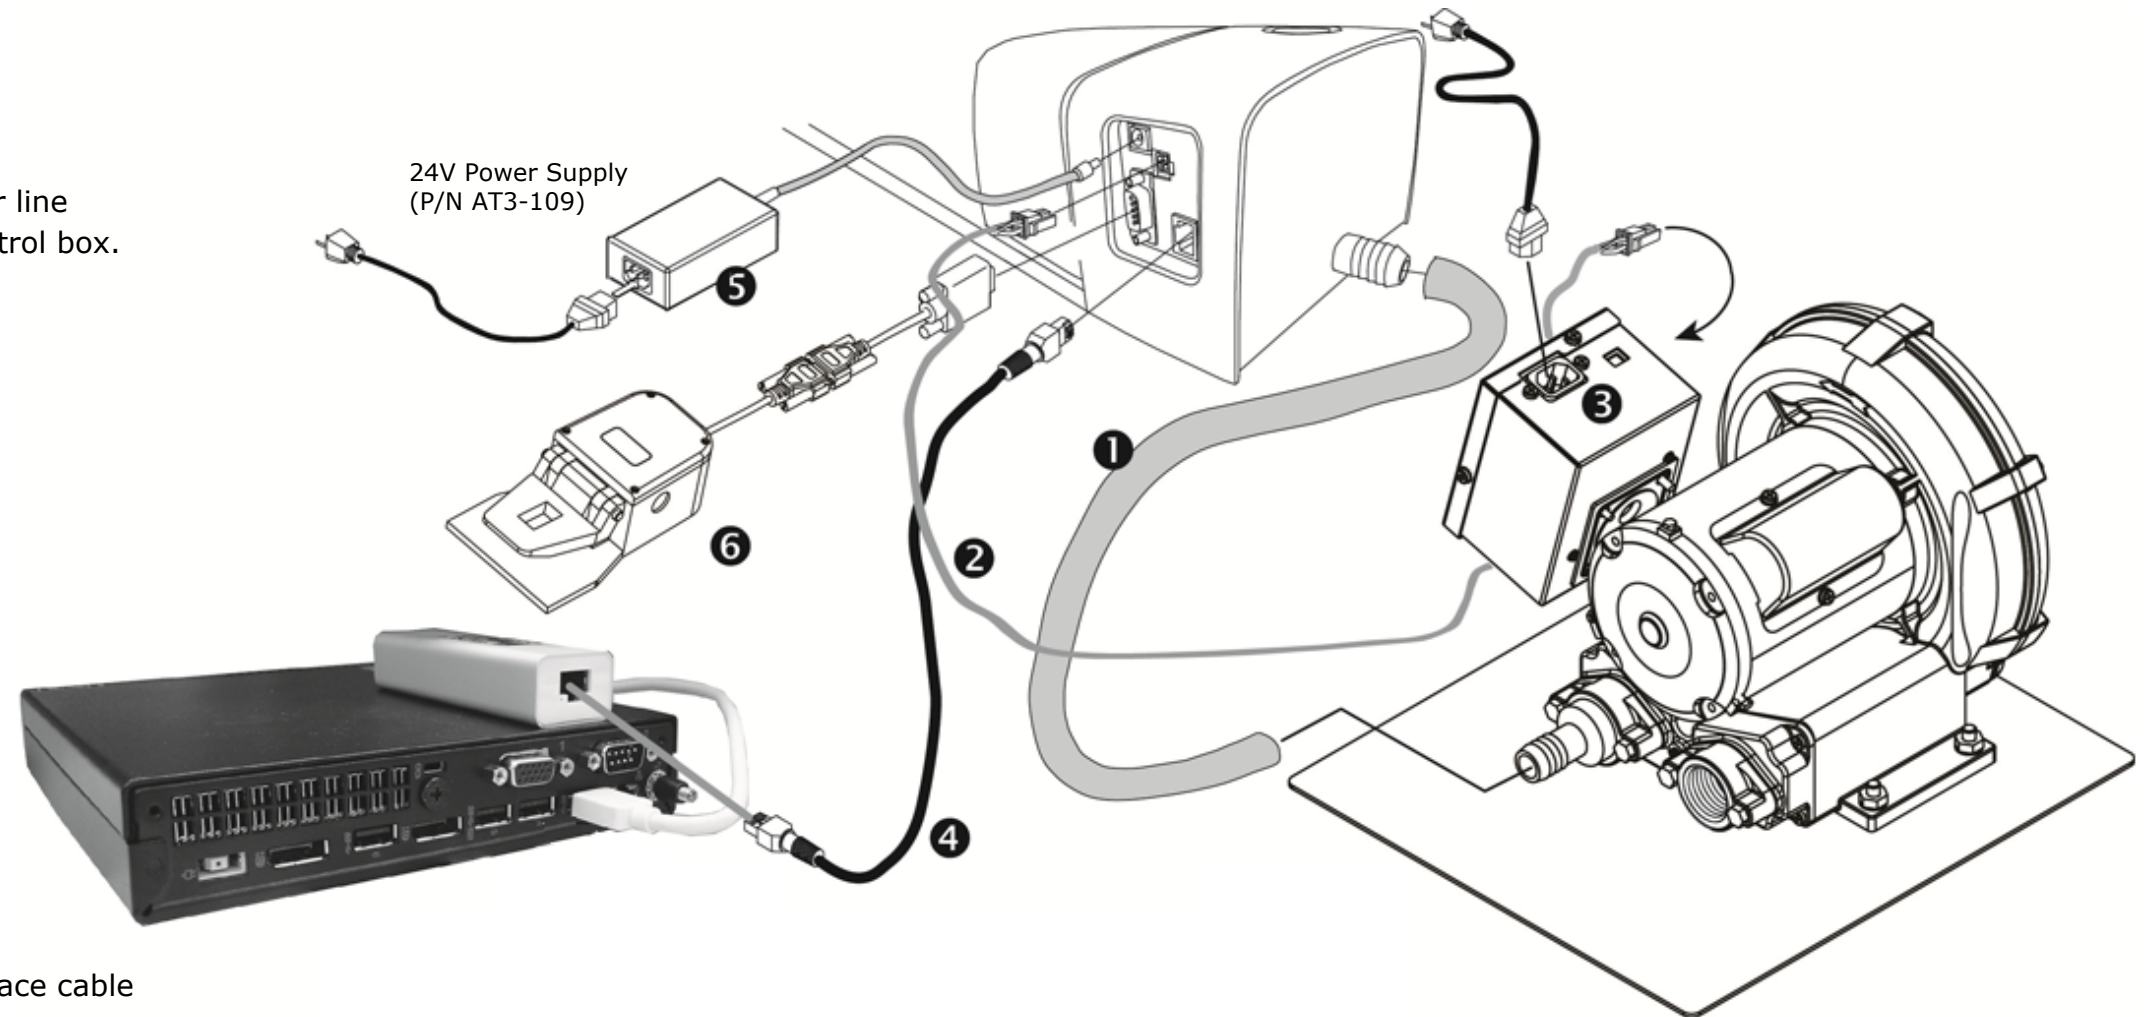

 x-rite

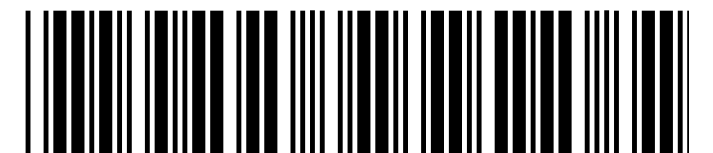

P/N AT3-703 Rev. E

