

ColorDesigner PLUS v3.5.1 - Patch 11

Contents of Patch

Patch 11 includes the following updates:

- Corrected a problem where CD PLUS would close unexpectedly at launch.

Patch 11 also includes everything in Patch 10:

- After an Automatic Database Update, the CBO Number increment was not being updated. It is now updated.

Patch 11 also includes everything in Patch 9:

- The CD PLUS settings file is automatically backed up daily. If the active settings file becomes corrupted, the X-Rite support team can quickly guide the user to find the most recent backup and restore it.

Patch 11 also includes everything in Patch 8:

- The automatic update system is now more robust for retail chains.

Patch 11 also includes everything in Patch 7:

- Improved the ability to share an instrument with other software applications. In particular, CD PLUS previously would not release the instrument connection after checking for a firmware update on startup; it now releases the connection.

Patch 11 also includes everything in Patch 6:

- Automatic updates would not trigger as defined in the CD PLUS settings. Updates now initiate as scheduled.

Patch 11 also includes everything in Patch 5:

- With some color match databases containing colorant combination rules, Color Match would sometimes provide no match results, even though it was possible to formulate a match. This behavior has been corrected.

Patch 11 also includes everything in Patch 4:

- With old VS205/VS450 instruments, calibration would sometimes succeed but CD PLUS would immediately ask for calibration again. This issue no longer occurs.

Patch 11 also includes everything in Patch 3:

- Several issues related to database and patch updates were corrected.

Patch 11 also includes everything in Patch 2:

- In Expert Mode, after calibration of iVue and VS450, the software would sometimes display an error message when no error actually occurred. This error has been corrected.

ColorDesigner PLUS v3.5.1 - Patch 11


- The Automatic Update feature may indicate a patch is available when in fact there is none. This miscue has been eliminated.

Patch 11 also includes everything in Patch 1:

- When base barcode scanning was enabled, the optional dispense confirmation dialog would be displayed either before the scan or not at all, depending on which dispenser protocol was selected. Now the confirmation dialog will be displayed (if enabled) after the base scan, regardless of the dispenser protocol.
- In Expert Mode Manual Entry, the ability to dispense was missing. Full dispensing capability has been added, including the dispenser queue, multi-can dispensing, and base barcode scanning.
- When CD PLUS was upgraded from a previous version, the About screen would show the patch level from the old version. The patch level is now displayed correctly.
- In the Data Management settings, changes to the order of Paint Lines made by drag and drop were not saved. This error has been resolved.
- In Manual Entry, the list of colorants was not alphabetized in some cases. This has been corrected.


Installing the Patch

1. Download the patch and unzip it. Double click CDPPatch.exe to start the installation.

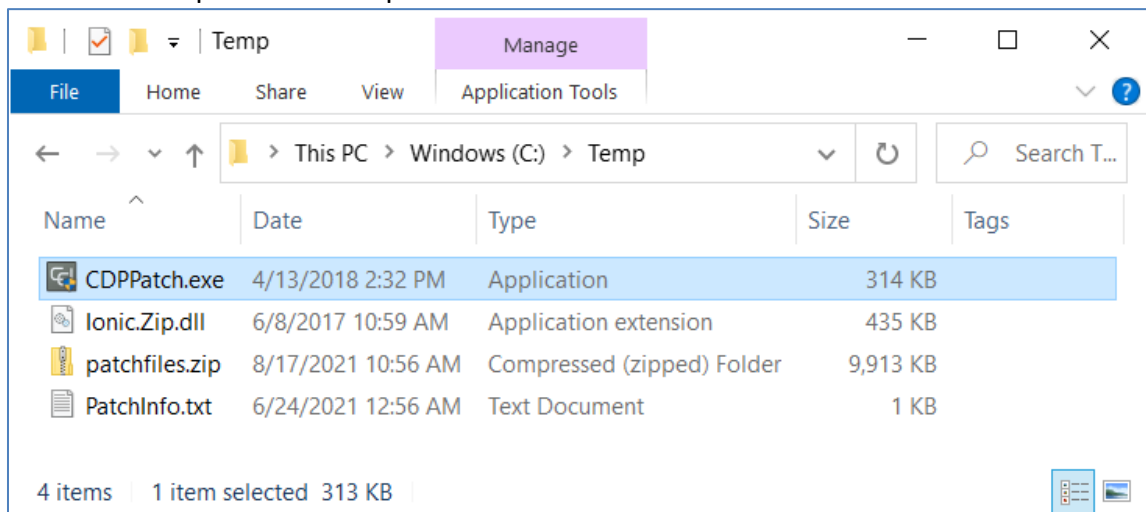

ColorDesigner PLUS v3.5.1 - Patch 11

2. During the installation, you will see the following window. Wait for the installation to finish.

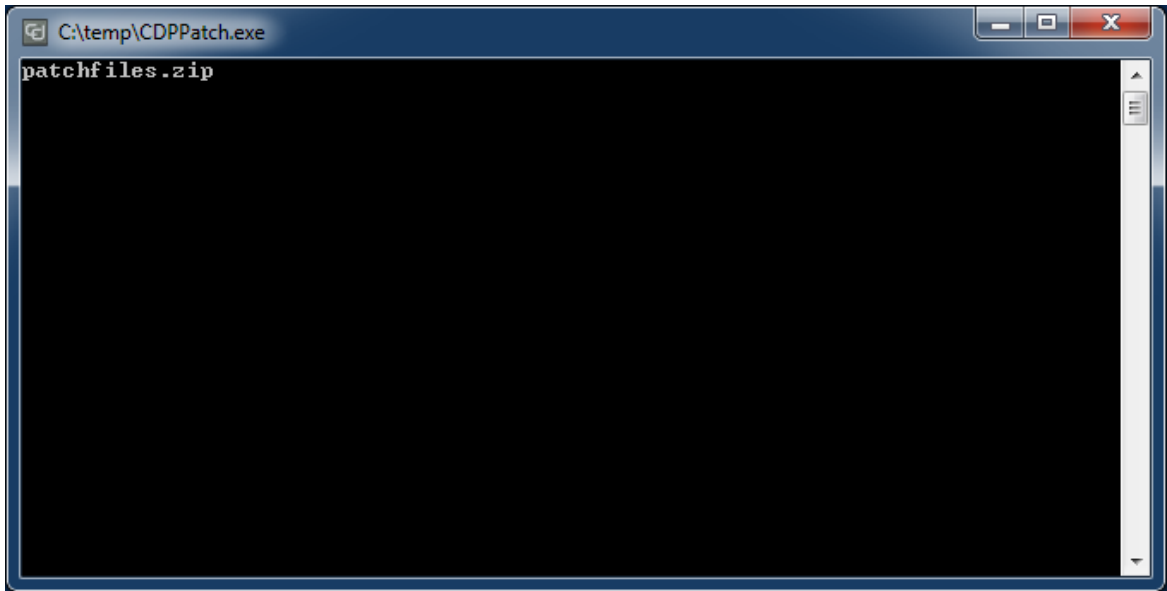

3. When the installation is finished, click **OK**.

