

ColorDesigner PLUS v3.5.1 - Patch 8

Contents of Patch

Patch 8 includes the following updates:

- The automatic update system is now more robust for retail chains.

Patch 8 also includes everything in Patch 7:

- Improved the ability to share an instrument with other software applications. In particular, CD PLUS previously would not release the instrument connection after checking for a firmware update on startup; it now releases the connection.

Patch 8 also includes everything in Patch 6:

- Automatic updates would not trigger as defined in the CD PLUS settings. Updates now initiate as scheduled.

Patch 8 also includes everything in Patch 5:

- With some color match databases containing colorant combination rules, Color Match would sometimes provide no match results, even though it was possible to formulate a match. This behavior has been corrected.

Patch 8 also includes everything in Patch 4:

- With old VS205/VS450 instruments, calibration would sometimes succeed but CD PLUS would immediately ask for calibration again. This issue no longer occurs.

Patch 8 also includes everything in Patch 3:

- Several issues related to database and patch updates were corrected.

Patch 8 also includes everything in Patch 2:

- In Expert Mode, after calibration of iVue and VS450, the software would sometimes display an error message when no error actually occurred. This error has been corrected.
- The Automatic Update feature may indicate a patch is available when in fact there is none. This miscue has been eliminated.

Patch 8 also includes everything in Patch 1:


- When base barcode scanning was enabled, the optional dispense confirmation dialog would be displayed either before the scan or not at all, depending on which dispenser protocol was selected. Now the confirmation dialog will be displayed (if enabled) after the base scan, regardless of the dispenser protocol.
- In Expert Mode Manual Entry, the ability to dispense was missing. Full dispensing capability has been added, including the dispenser queue, multi-can dispensing, and base barcode scanning.
- When CD PLUS was upgraded from a previous version, the About screen would show the patch level from the old version. The patch level is now displayed correctly.

ColorDesigner PLUS v3.5.1 - Patch 8

- In the Data Management settings, changes to the order of Paint Lines made by drag and drop were not saved. This error has been resolved.
- In Manual Entry, the list of colorants was not alphabetized in some cases. This has been corrected.


Installing the Patch

1. Download the patch and unzip it. Double click CDPPatch.exe to start the installation.

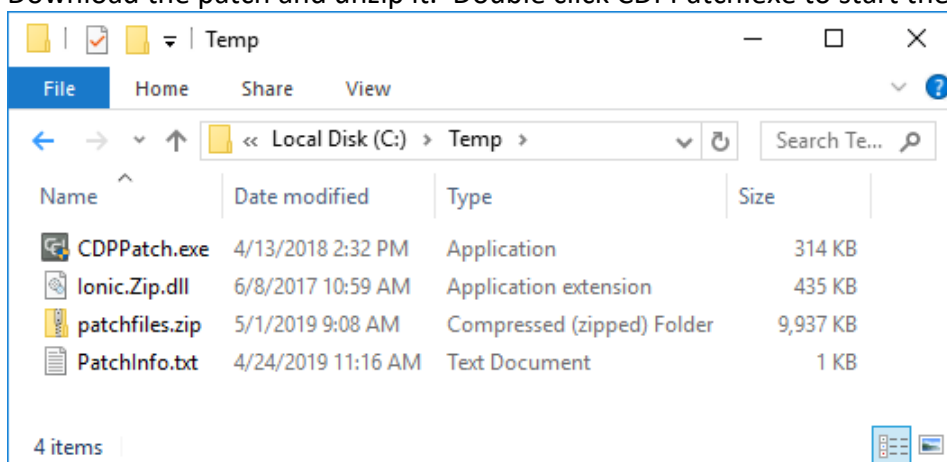

ColorDesigner PLUS v3.5.1 - Patch 8

2. During the installation, you will see the following window. Wait for the installation to finish.

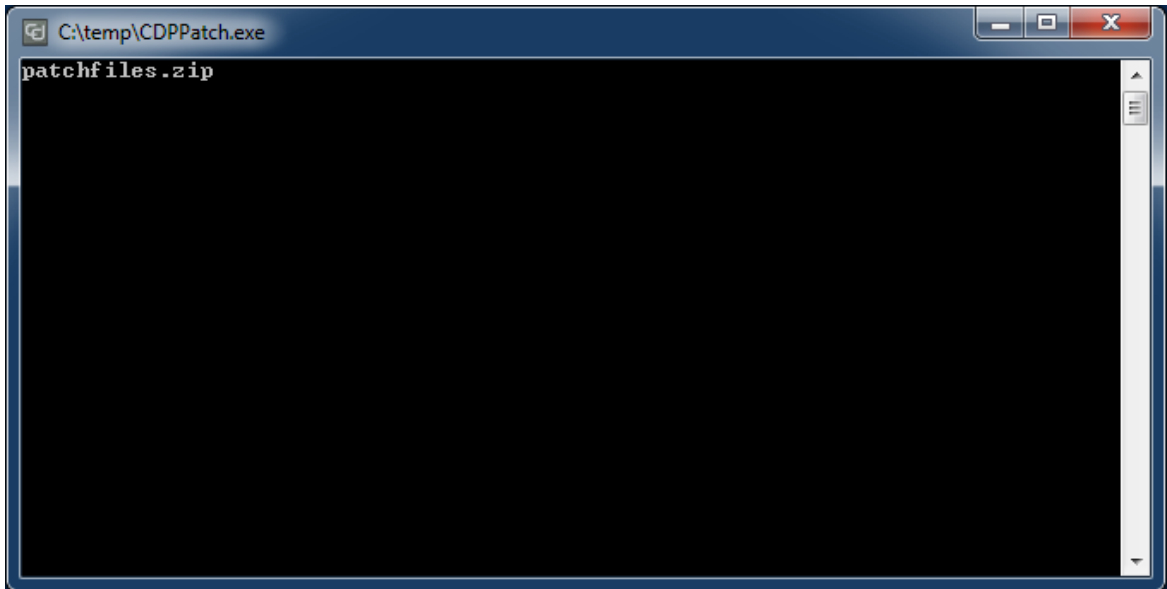

3. When the installation is finished, click **OK**.

