

# ColorDesigner PLUS v3.6 - Patch 5

---

## Contents of Patch

Patch 5 includes the following updates:

- The automatic update system is now more robust for retail chains.

Patch 5 also includes everything in Patch 4:

- Improved the ability to share an instrument with other software applications. In particular, CD PLUS previously would not release the instrument connection after launch.
- Added support for Ci52 OEM instrument models, including the ability to enable/disable a transform embedded in the instrument.
- Corrected a dispenser setup issue: when a newer version of the FAST & Fluid Management IDD was installed, CD PLUS would not detect its presence and would display an error message. This error has been corrected.
- The dispense log file was renamed to "DispenserLog.txt", and the date/time written to the log represents the beginning of the dispense, not its completion.
- Added Polish language translations for the CD PLUS help files.

Patch 5 also includes everything in Patch 3

- Improved the ability to share an instrument with other software applications. In particular, CD PLUS previously would not release the instrument connection after checking for a firmware update.

Patch 5 also includes everything in Patch 2

- Added Polish language translations for the CD PLUS application.
- Added Romanian language translations for the CD PLUS application and the help files.
- Added Dutch language translations for the help files.
- Updated dispense logging so no log entry is created until after a successful scan of the base barcode (when a base scan is required).


Patch 5 also includes everything in Patch 1:

- Corrected a problem where scheduled updates would not initiate.
- Resolved issues in which the user settings for scheduled updates were ignored.
- Updated the automatic update notification dialog so it always appears on top of the CD PLUS window.
- Eliminated the creation of duplicate entries in the dispense log.


# ColorDesigner PLUS v3.6 - Patch 5

## Installing the Patch

1. Download the patch and unzip it. Double click CDPPatch.exe to start the installation.

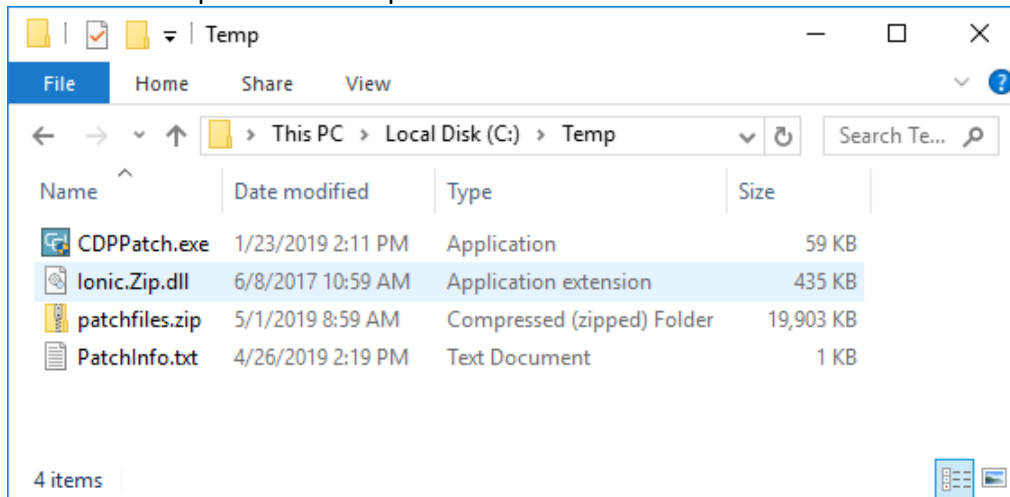

2. During the installation, you will see the following window. Wait for the installation to finish.

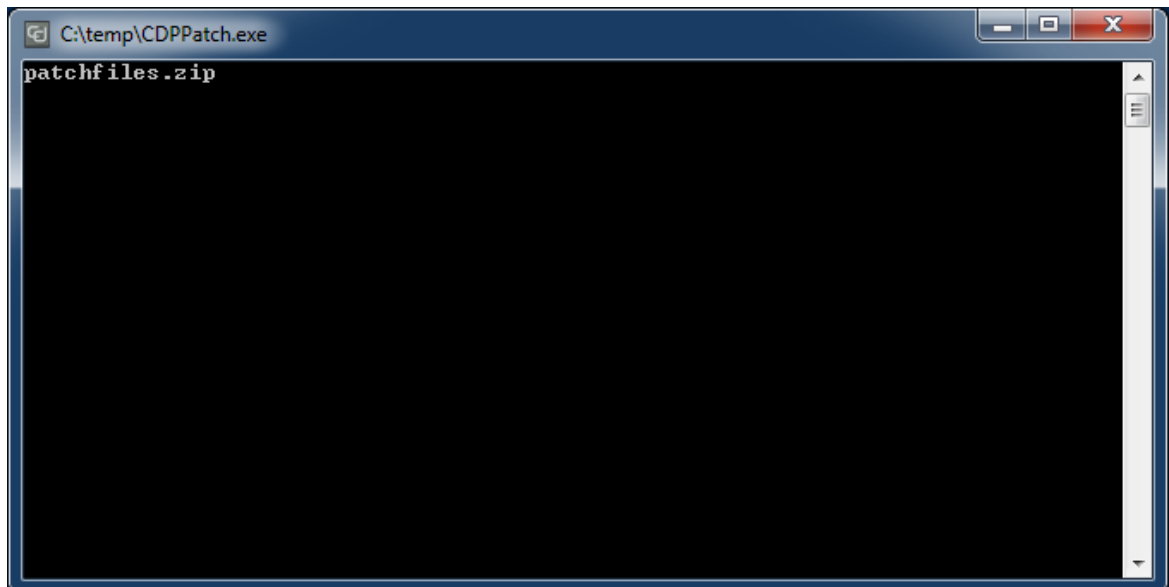

3. When the installation is finished, click **OK**.

