

How to import corrected XRGAs tagged ISO/G7/Japan Color libraries into IntelliTrax software.

Update ISO/G7/Japan Color files to XRGAs






Product P/N: **ITX 1.6** Version: **1**
Date: 19 March 2012

Note: These libraries are to be used with ITX v1.6 ONLY.



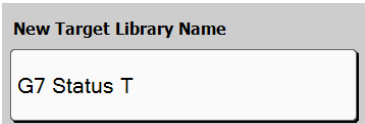




1. Download Updated Files

- Download the files you require from the following location:
www.xrite.com => Support => Downloads => IntelliTrax Auto Scanning System => Software Downloads

2. Install Updated Files

Step 1.	Unzip either or all the XRGAs G7 Library.zip, XRGAs ISO Library.zip, and/or XRGAs Japan Color.zip libraries to the desktop.
Step 2.	Click on the IntelliTrax Launcher. 
Step 3.	Click on the Editors Icon. 
Step 4.	Click on the Target Library button. 
Step 5.	Click on the Import button. 
Step 6.	Navigate to the desktop and click on one of the following:  <ul style="list-style-type: none">G7 Status E XRGAs.ttlG7 Status T XRGAs.ttlISO Status E XRGAs.ttlISO Status T XRGAs.ttl

How to import corrected XRGB tagged ISO/G7/Japan Color libraries into IntelliTrax software.

Step 7.	Click on the Open. 
Step 8.	Click on Yes when ask to continue. 
Step 6.	The software will ask which Target Library you want save the targets in. Leave the name EACTLY as listed when each file is imported in. 
Step 9.	Click on the OK button. 
Step 10.	The software will indicate that the target in the library already exists. 
Step 11.	Check the box "Do this for all Conflicts".  Do this for all conflicts
Step 12.	Click on the Yes button. 
Step 13.	Follow Steps 5 -12 to import other ISO or G7 XRGB corrected libraries.