


## LUT Testing Application Information

This is an application created by Sequel Imaging to test whether a video card supports the loading and unloading of monitor Look-Up-Tables (LUTS) that takes place when displays are calibrated and profiled.

The application is a simple executable that does not require an installer. It has a file size of less than 150kb to allow quick download times.


### Instructions

1. Download the application called LUT\_Tester.exe from Monaco's web site and save it to your hard drive. (Please note the file's download location so you can find it after the download is complete.)
2. Double-click on the application and you will see the main application window. (See Figure 1)

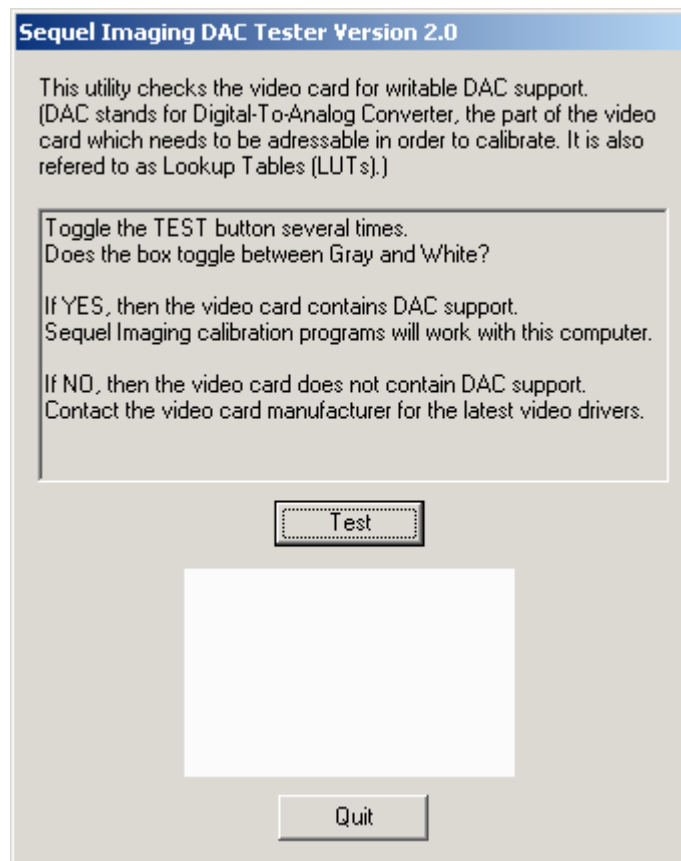

**Figure 1**

3. Click 'Test' and the application will attempt to download a simple LUT to the video card. If the white box turns gray, the video card supports LUT downloads. (See Figure 2)

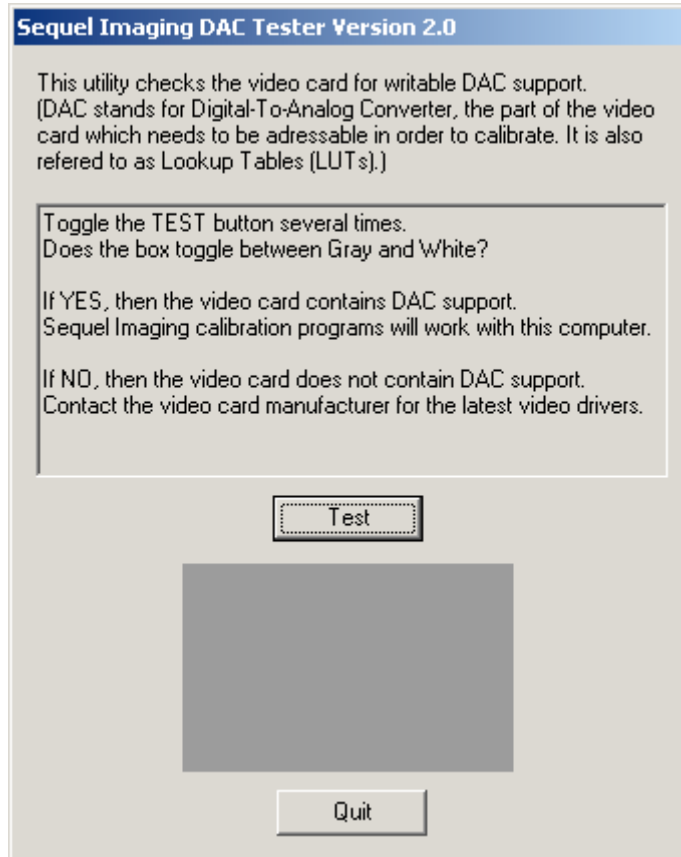

**Figure 2**

4. Click 'Test' again and the application will unload the LUT and the box will turn white again.
5. Click 'Quit' to exit the application.

There is no Macintosh version of this application as all Mac-compatible video cards support LUTs as part of their requirement to run on a Mac system.