


## InkFormulation / ColorQuality - Online Client Installation

To connect the devices eXact, Ci4200, Ci4200UV, Ci52, Ci62, Ci64 and Ci64UV with the online version of InkFormulation 6 and ColorQuality 6, an additional driver has to be installed on the client computer. The driver is available for download on [www.xrite.com](http://www.xrite.com). Depending on the SpectroServer version of the Online system, the following driver version is requested:


Spectro-Server	Client driver	Supported Measurement devices
3.1	<b>Terminal Server:</b> eXact Online Client <b>1.0</b>	eXact
3.2	<b>Terminal Server:</b> InkFormulation/ColorQuality Client <b>1.0</b>	eXact, Ci4200, Ci4200UV
3.3	<b>Terminal Server:</b> InkFormulation/ColorQuality Client <b>1.1</b> <b>Citrix:</b> InkFormulation/ColorQuality Citrix Client <b>1.1</b> or <b>Terminal Server:</b> InkFormulation/ColorQuality Client <b>1.2</b> <b>Citrix:</b> InkFormulation/ColorQuality Citrix Client <b>1.2</b>	eXact, Ci4200, Ci4200UV, Ci62, Ci64, Ci64UV
3.4	<b>Terminal Server:</b> InkFormulation/ColorQuality Client <b>1.2</b> <b>Citrix:</b> InkFormulation/ColorQuality Citrix Client <b>1.2</b>	eXact, Ci4200, Ci4200UV, Ci52, Ci62, Ci64, Ci64UV

Please follow the instruction for the installation:

1. Open the **Client Driver**.
2. Select the language for the installation.

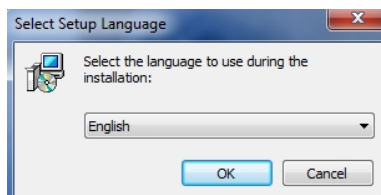


3. To prepare the installation, click on **Next >**

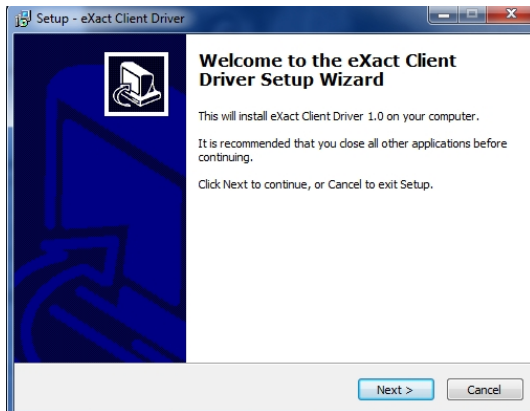


4. After **accepting the agreement**, click on **Next>** to continue.



5. To start the installation, please click on **Install**.

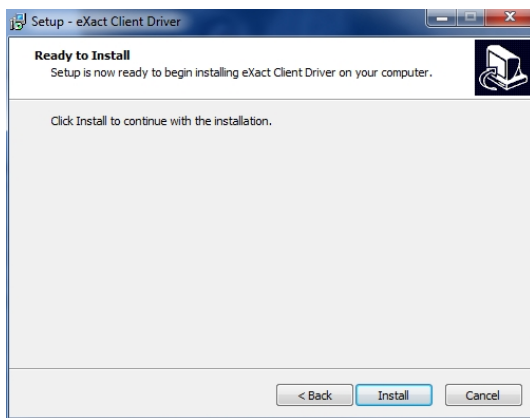

6. To complete the installation, please click on **Finish**.

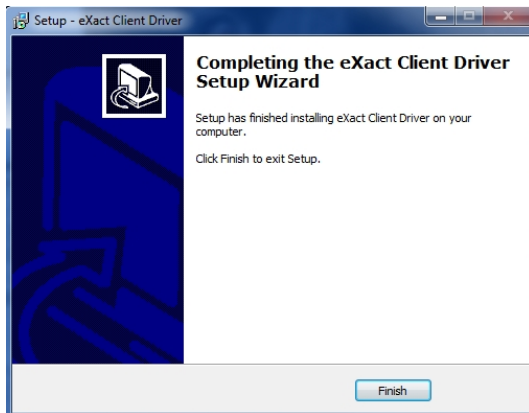

After installation of the Client Driver you have to install the instrument driver from the instrument installation CD or from [www.xrite.com](http://www.xrite.com).

**64bit Client:**

To run the client on a 64bit system, create a Batch-File (\*.bat) on the client system with the following content and run it:

```
@echo off  
  
set WinDir=  
  
start C:\Windows\SysWow64\mstsc.exe
```

Herewith the measurement device (s) can be connected with Bluetooth and USB to InkFormulation Online / ColorQuality Online.