
X-rite PANTONE®



ColorDesigner PLUS

Paint Matching Software

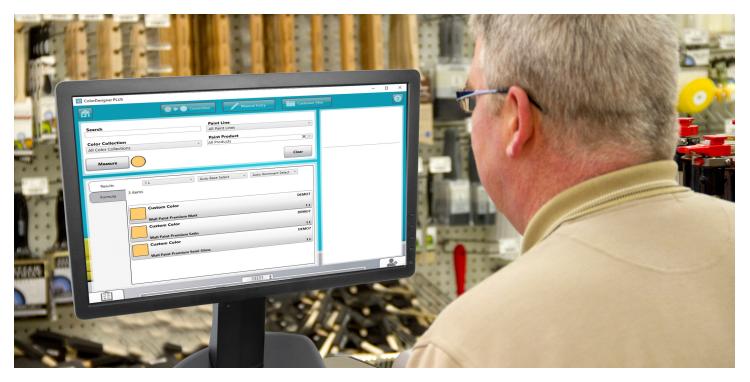

Match Paint Colors Fast

Achieving fast and accurate color matching is essential for maintaining customer satisfaction in retail paint. That's why we've developed ColorDesigner PLUS, a tailored software solution specifically for retail paint departments. When combined with X-Rite's state-of-the-art color measurement instrumentation, this complete color solution elevates any paint department to a color design center.

With ColorDesigner PLUS, the color selection process is streamlined, and waste and formulation errors are greatly reduced. Don't settle for anything less than the best. Choose ColorDesigner PLUS for your retail paint department and exceed your customers' expectations every time.

Effortless and User-Friendly

- Prevent mistakes with an easy-to-use interface and provide a hasslefree experience for both associates and customers.
- Ensure associates are always up to date with integrated training videos that provide on-site guidance.
- Deliver the software package that the store needs without any unnecessary additional features, with configuration determined at headquarters or at time of installation.

Color Creation: Streamline Your Design Process

- Eliminate the need for a separate computer and application, saving valuable counter space.
- Manage and control dispensers from a single, easy-to-use, and affordable software system.
- Reduce error and unnecessary steps with an optional bar code scanner.
- Automatically update the entire store network to ensure accurate and consistent color matches with the latest data.

Version Enhancements

Feature	v2.6	v3.0	v3.1	v3.5	v3.6	v3.7	v3.8	v3.9
Color Lookup Speed Improvements		x	х	x	X	X	X	X
Automatic Updates		X	X	X	Х	Х	Х	X
Dispenser Management for FM and Hero		X	x	X	Х	Х	Х	X
Dispenser Queue			X	X	X	X	X	X
MetaVue Support				X	Х	Х	Х	X
Enhanced Colorant Rules	X			X	X	X	X	X
Fluid Management IDD4 Support					X	X	X	X
i1 Paint Support						X	X	X
Flexible Formula Display Settings						Х	Х	X
Live Search in Expert Mode						X	Х	X
Live Search in Color Lookup							X	X
Print User's Initials on Label							Х	X
Windows 11 Support							Х	X
Use of Data from Color iMatch								X
Advanced Correction								X
Ability to cancel a dispense								X

System Requirements

	ColorDesigner PLUS	
Windows System Requirements	Windows 10 & 11 (64 bit)	
Memory	4 GB minimum, 8 GB recommended	
Display Resolution	1400x1024 minimum	
Databases	Microsoft SQL Server 2019	
Configuration Options	Lookup, Search, Match	
Connectivity	Ports for spectrophotometer, printer, dispenser, barcode scanner	

Full list of specifications available at www.xrite.com/colordesigner-plus-software

Service & Support

Service Support & Warranty X-Rite's color analysis and measurement solutions are engineered and manufactured to the most rigorous quality standards. These standards are backed by comprehensive global service, superior phone and web support, and preventative maintenance options to optimize your long-term investment. We have developed service support and warranty plans that are unique to your organization's specific products and needs.

Learn more by reviewing our service offerings on our website at: www.xrite.com/page/service-warranty Still unsure of what you need? Contact us directly at: www.xrite.com/page/service-warranty Still unsure of what you need? Contact us directly at: www.xrite.com/page/service-warranty Still unsure of what you need? Contact us directly at: www.service.com/page/service-warranty



X-Rite is either a registered trademark or trademark of X-Rite, Incorporated in the United States and/or other countries. PANTONE©, PantoneLIVE and other Pantone trademarks are the property of Pantone LLC. All other trademarks or registered trademarks are the property of their respective owners. © X-Rite, Inc. 2023. All rights reserved. L10-715-EN (05/23)