



MetaVue™ Benchtop Spectrophotometer



Adjustable aperture size range

Non-Contact Imaging Spectrophotometer Brings Breakthrough Versatility

Retail paint customers provide a wide array of items for matching paint, everything from paint chips and fabric to siding or even wood trim. On a daily basis, paint associates face challenges that include mismatched paints and increased waste, which can lead to customer dissatisfaction.

MetaVue, an easy-to-use non-contact imaging spectrophotometer from X-Rite, is the first of its kind to offer superior measurement performance, delivering consistent measurements for precise paint formulation. This instrument provides paint associates the ability to easily respond to a range of different types of customer samples and accurately measure them, building confidence behind the paint counter, and increasing customer loyalty.


Measure a Wide Range of Samples

- Isolate multiple colors in multi-colored items, such as fabric, by extracting the dominant colors versus averaging the colors like traditional spectrophotometers.
- Increase flexibility and ease of use, with aperture sizes ranging from 2mm to 12mm, to easily respond to a range of different types of customer samples.
- Provide precise color matches with an advanced smart spot image feature that matches color, also accounting for the impact of texture and other appearance effects that typically skew measurements of materials like carpet, vinyl, or fabric.

Improve User Experience

- Deliver precise digital targeting using an on-board full-color camera to quickly and easily select the exact target area to be measured.
- Provide stored image samples to ensure a measurement audit trail and easy retrieval of images for future reference.
- Maintain instrument cleanliness with a retractable location-aware sample positioner.
- Reduce learning curve with easy to operate front panel buttons and status indicator lights.


MetaVue Benchtop Spectrophotometer

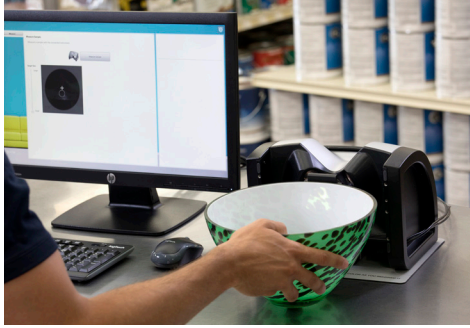

Measure desired portion of the sample with precision



Identify multiple colors in a sample

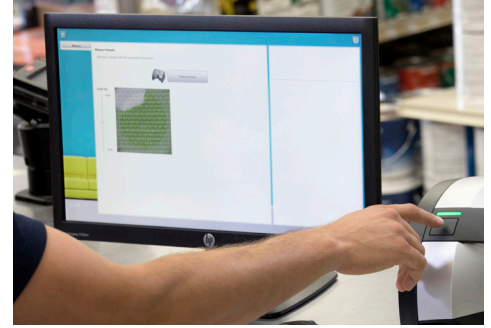

Capture exact spot desired with on-screen digital targeting

Make MetaVue a Complete Solution

ColorDesigner PLUS

X-Rite's ColorDesigner PLUS color matching software expedites and refines the paint selection process to eliminate wasted effort and needless formulation errors. It can connect to a paint dispenser system for fast delivery of paint color formulations, mix the customer's color in the paint product they want, and look up colors across paint lines (optional), turning any paint department into a color design center.

W90 Series

Our W Series product bundles offer various combinations of color matching hardware and formulation software to meet the needs of retail paint operations of all sizes. The W90 Series is the most versatile and accurate hardware and software bundle to help paint counter associates match a wide variety of samples.

Specifications

	MetaVue
Short Term Repeatability - White	0.04 CIELAB
Measurement Geometry	45/0 imaging spectrophotometer
Inter-Instrument Agreement	0.30 avg CIELAB
Light Source	Full spectrum LED
Measurement Spot	2mm to 12 mm
Spectral Range	400-700 nm @ 10 nm
Dimensions (length, width, height)	9.75" W x 7.1" H x 7.25" D

Full list of specifications available at www.xrite.com/metavue

Service Support & Warranty

X-Rite's color analysis and measurement solutions are engineered and manufactured to the most rigorous quality standards. These standards are backed by comprehensive global service, superior phone and web support, and preventative maintenance options to optimize your long-term investment. We have developed service support and warranty plans that are unique to your organization's specific products and needs.

Learn more by reviewing our service offerings on our website at: www.xrite.com/page/service-warranty.

Still unsure of what you need? Contact us directly at: servicesupport@xrite.com



X-Rite is either a registered trademark or trademark of X-Rite, Incorporated in the United States and/or other countries. PANTONE®, PantoneLIVE and other Pantone trademarks are the property of Pantone LLC. All other trademarks or registered trademarks are the property of their respective owners. © X-Rite, Inc. 2021. All rights reserved. L3-338-EN (10/21)

xrite.com/metavue