Macbeth Lighting





SpectraLight III

Operation Manual

CE DECLARATION



Hereby, X-Rite, Incorporated, declares that this Spectralight III is in compliance with the essential requirements and other relevant provisions of Directive(s) EMC 2004/108/EC, LVD 2006/95/EC, and RoHS 2011/65/EU (Category 9, industrial).

FEDERAL COMMUNICATIONS COMMISSION NOTICE

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

INDUSTRY CANADA COMPLIANCE STATEMENT

This Class A digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.



EQUIPMENT INFORMATION

Use of this equipment in a manner other than that specified by X-Rite, Incorporated may compromise design integrity and become unsafe.

WARNING: This instrument is not for use in explosive environments.



Instructions for disposal: Please dispose of Waste Electrical and Electronic Equipment (WEEE) at designated collection points for the recycling of such equipment.



SAFETY INSTRUCTIONS

- PLEASE READ AND FOLLOW INSTRUCTIONS—Read and follow all instructions before you attempt to assemble, install or operate the unit.
- RETAIN THIS MANUAL FOR FUTURE REFERENCE—Once you have read this manual, keep it handy for others to read or refer to when they need to operate the unit.
- OBEY WARNINGS—Please comply with all warnings and safeguards that we provide in this manual. They have been written to keep you and your unit safe. If the unit is used in a manner not specified in this manual, the protection provided by the unit may be impaired.
- USE ONLY A PROPER POWER SOURCE—Use the proper power source for this unit. Consult the power label on the back of the unit for this information. Operation with a power source not specified on the power label may result in inaccurate lighting conditions, damage to the equipment, and possible personal injury.
- DO NOT BLOCK VENTS— Light sources contribute heat to the area of operation. SpectraLight III thermal contribution is 5460 BTU maximum that is dissipated through the vents in the top panel. Blocking of the vent could result in overheating, mechanical failure, and a fire hazard if flammables or combustibles are present.
- PROTECT FROM WATER AND MOISTURE—Do not install overhead luminaires under a sprinkler system. Maintain electrical safety when you use this unit. Do not use it in an area where there is possible hazard of electric shock from spilled water or other liquids or uncontrolled moisture.

- CLEAN PROPERLY—You can wipe the unit with a clean, white lint-free cloth. Do not apply liquid cleaners or
 agents containing wax, since these can yellow and change reflectance and gloss properties. Clean outer
 surfaces with a dampened cloth containing a mild soap.
- CAREFULLY HANDLE THE LAMPS AND DAYLIGHT FILTERS—Allow the lamps and daylight filters to cool before handling them. Always use lens paper or an equivalent to handle any of the replacement tungsten lamps. Skin oils interfere with lamp performance.
- UV-A EMISSIONS—A low level UV radiation is emitted when the UV feature is activated. Avoid direct
 exposure of 15 minutes or more under UV radiation. Protective measures are required for prolonged
 exposure.
- EMERGENCY SHUT-OFF—The unit should be installed near a main power shut-off switch in the event of an emergency.

WARRANTY INFORMATION

X-Rite warrants this Product against defects in material and workmanship for a period of twelve (12) months from the date of shipment from X-Rite's facility, unless mandatory law provides for longer periods. During such time, X-Rite will either replace or repair at its discretion defective parts free of charge.

X-Rite's warranties herein do not cover failure of warranted goods resulting from: (i) damage after shipment, accident, abuse, misuse, neglect, alteration or any other use not in accordance with X-Rite's recommendations, accompanying documentation, published specifications, and standard industry practice; (ii) using the device in an operating environment outside the recommended specifications or failure to follow the maintenance procedures in X-Rite's accompanying documentation or published specifications; (iii) repair or service by anyone other than X-Rite or its authorized representatives; (iv) the failure of the warranted goods caused by use of any parts or consumables not manufactured, distributed, or approved by X-Rite; (v) any attachments or modifications to the warranted goods that are not manufactured, distributed or approved by X-Rite. Consumable parts and Product cleaning are also not covered by the warranty.


X-Rite's sole and exclusive obligation for breach of the above warranties shall be the repair or replacement of any part, without charge, which within the warranty period is proven to X-Rite's reasonable satisfaction to have been defective. Repairs or replacement by X-Rite shall not revive an otherwise expired warranty, nor shall the same extend the duration of a warranty.

Customer shall be responsible for packaging and shipping the defective product to the service center designated by X-Rite. X-Rite shall pay for the return of the product to Customer if the shipment is to a location within the region in which the X-Rite service center is located. Customer shall be responsible for paying all shipping charges, duties, taxes, and any other charges for products returned to any other locations. Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the unit is within the Warranty period must be presented to obtain warranty service. Do not try to dismantle the Product. Unauthorized dismantling of the equipment will void all warranty claims. Contact the X-Rite Support or the nearest X-Rite Service Center, if you believe that the unit does not work anymore or does not work correctly.

THESE WARRANTIES ARE GIVEN SOLELY TO BUYER AND ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR APPLICATION, AND NON-INFRINGEMENT. NO EMPLOYEE OR AGENT OF X-RITE, OTHER THAN AN OFFICER OF X-RITE, IS AUTHORIZED TO MAKE ANY WARRANTY IN ADDITION TO THE FOREGOING.

IN NO EVENT WILL X-RITE BE LIABLE FOR ANY OF BUYER'S MANUFACTURING COSTS, OVERHEAD, LOST PROFITS, GOODWILL, OTHER EXPENSES OR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES BASED UPON BREACH OF ANY WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, STRICT TORT, OR ANY OTHER LEGAL THEORY. IN ANY EVENT OF LIABILITY, X-RITE'S MAXIMUM LIABILITY HEREUNDER WILL NOT EXCEED THE PRICE OF THE GOODS OR SERVICES FURNISHED BY X-RITE GIVING RISE TO THE CLAIM.

INTRODUCTION

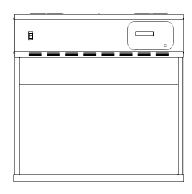

The X-Rite SpectraLight III is a visual color evaluation system which provides five selectable light sources:

- Simulated Daylight (D75, D65, or D50)
- Horizon (early morning sunrise/afternoon sunset simulation)
- Illuminant "A" (incandescent home lighting)
- Cool White Fluorescent (CWF)
- Custom Fluorescent (TL84 or U30)
- **Ultraviolet** (UV- used in conjunction with another source)

SPECIFICATIONS

MODEL	OVERHEAD LUMINAIRE	VIEWING BOOTH		
DIMENSIONS	Height: 9.5 in (24.1 cm) Width: 37.1 in (94.2 cm) Depth: 25.7 in (65.3 cm)	Height: 27.5 in (69.9 cm) Width: 37 in (94 cm) Depth: 24.4 in (62 cm)		
WEIGHT/SHIPPING WEIGHT	92 lbs (42 kg)/115 lbs (52 kg)	154 lbs (70 kg)/181 lbs (82 kg), incl. luminaire		
ELECTRICAL POWER	Dedicated 20 A line and 20 A line protection configured receptacle, required for 90-120 VAC. Maximum power dissipation is 1500 watts. 100-117 VAC ± 10% 50/60 Hz supplied with 5-20P NEMA (National Electrical Manufacturers Association) plug 220-240 VAC ± 10% 50/60 Hz supplied with CEE 7/4 a continental Europe plug			
LAMP COMPLEMENT	Daylight: Two (2) 750 Watt Tungsten Halogen Horizon: Four (4) 500 Watt Tungsten Halogen – 2300K Illuminant A (Incandescent): Two (2) 150 Watt Tungsten Halogen – 2856K Cool White Fluorescent: Two (2) F30T8/CW – 4150K Ultraviolet: Two (2) F30T8 BLB & One (1) F6T5 BLB Custom Fluorescent: Two (2) F30T12/U30 – 3000K, Two (2) F30T8/TL84 – 4000K, or Two (2) F25T8/U35 – 3500K			
SAFETY COMPLIANCE	Pollution Degree: 2 Usage: Indoor Only Altitude: 2000M Transient Overvoltage: Category II			
ENVIRONMENTAL REQUIREMENTS	Operating Temperature: 0°C to 50°C (32°F to 122°F) Storage Temperature: -40°C to 70°C (-40°F to 158°F) Relative Humidity: 90% max (non condensing)			

INSTALLATION

Recommendations for Surround

X-Rite SpectraLight III is designed for critical color evaluation and therefore it is important that precautions betaken to ensure the best environment for this purpose.

- Viewing booth installations provide an area which is manufactured in conformance with ASTM standards. The work surface and surround area of view are neutral in color and low in gloss. The opening of the booth should face an area that provides the least interference from ambient light (natural or artificial).
- Overhead luminaire installations require the user to develop a controlled viewing environment. Contamination from
 other light sources can minimize the effectiveness of a standardized source, so the evaluation area should always be
 shielded from ambient light (natural or artificial). The best location for an overhead luminaire is in a windowless room
 with no interference from other light sources. If these conditions are not available, light-tight curtains should be


selected, a viewing booth should be constructed, or an enclosing curtain should be used. The Luminaire should be installed no closer than 2 feet to the nearest walls to minimize light level uniformity problems. To avoid color misjudgments, the background on which the sample is placed and the surrounding area of view should be neutral in color and have a low gloss. It is typically recommended that Munsell N7/ is used.

White backgrounds are recommended when evaluating low gloss or light color samples, gray backgrounds are
recommended when evaluating medium gloss of intermediate color samples, and matte or flat black backgrounds are
recommended when evaluating high gloss or dark color samples.

Viewing Booth Installation

Note: To ensure adequate support and space for the unit, see "SPECIFICATIONS" on page1.

- 1. Move the viewing booth shipping container to the general area that the booth is to be used. Be sure to allow for sufficient room for assembly (approximately 10 ft x 10 ft area is recommended).
- 2. Carefully unpack and remove the viewing booth components from the shipping containers. Carefully examine each shipping container for contents before discarding it.

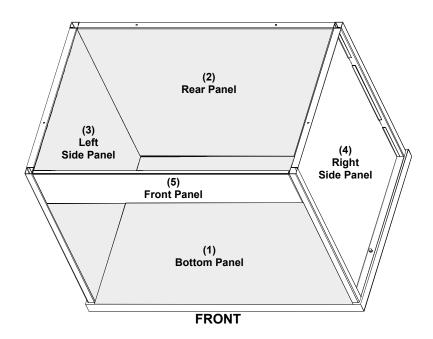

CAUTION

Avoid scratching the surface of any of the items in the following steps.

3. Place the Bottom Panel (#1) on a clean, smooth surface. See Figure 1.

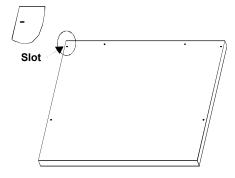


Figure 1. Bottom Panel

4. Position the Rear Panel (#2) bottom notches into the Bottom Panel (#1) rear slots. Fasten the Rear Panel to the Bottom Panel by securing it with two thumbscrews as shown in Figure 2.

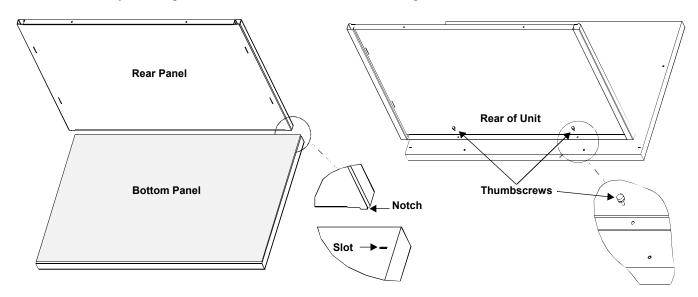


Figure 2. Rear Into Bottom Panel

5. While supporting the Rear Panel, insert the Left Panel (#3) side tabs into the Rear Panel (#2). Fasten the Left Panel to the Bottom Panel by securing it with the thumbscrew as shown in Figure 3.

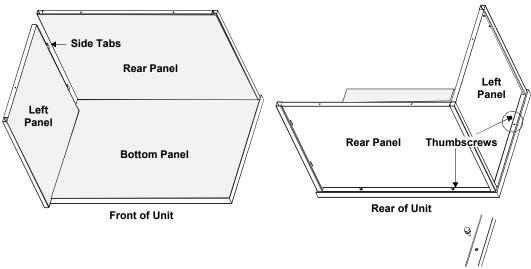


Figure 3. Left Panel Into Rear and Bottom Panel

6. Insert the Right Panel (#4) side tabs into the Rear Panel (#2). Fasten the Right Panel to the Bottom Panel by securing it with the thumbscrew, as shown in Figure 4.

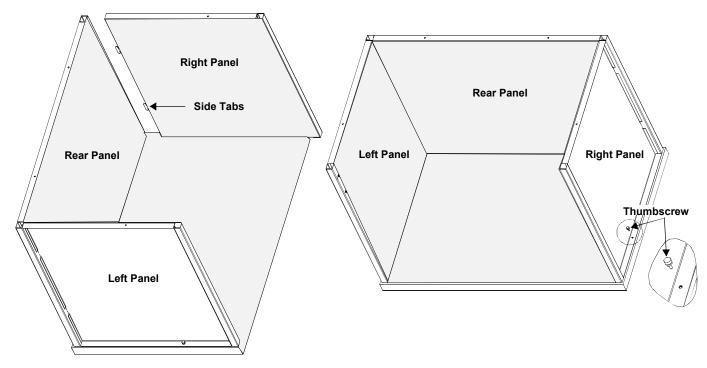
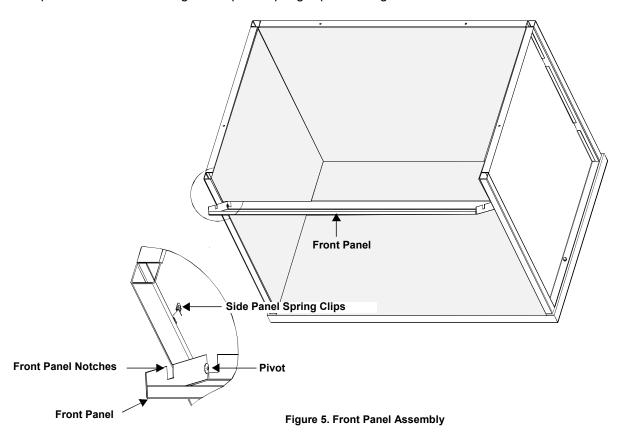


Figure 4. Right Panel Into Rear and Bottom Panel

- 7. Slide the pivot slots on the front panel (#5) onto the pivots located on each of the two side panels.
- 8. Flex the side panels as necessary so that both ends of the front panel rest on their respective pivots.
- 9. Pivot the front panel upwards toward the unit and secure it in place by rotating it about the pivots and locking in place with the left and right side panel spring clips. See Figure 5.




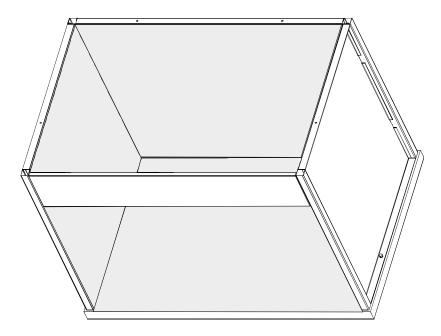


Figure 6. SpectraLight III Viewing Booth

- 10. The Spectralight Booth is now fully assembled. See Figure 6.
- 11. Place the viewing booth on the table or bench capable of holding a minimum of 300 lbs (136 kg).

Note: The table or bench height should be determined by the average height of the observer and whether observations will be made from a standing or sitting position.

- 12. Carefully unpack and remove the overhead luminaire from its shipping container.
- 13. With its controls and indicators facing to the front, carefully place the luminaire atop the viewing booth. Align the luminaire with the positioning tabs on the viewing booth.

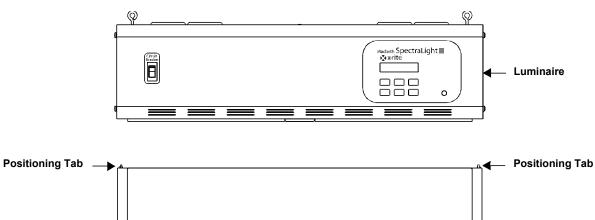

Assembled Booth

Figure 7. Luminaire Placement

The SpectraLight III diffuser is shipped in a separate container and must be installed next.

14. Carefully unpack and remove the diffuser from its shipping container.

CAUTION

Be careful not to scratch the interior of the booth.

Make sure the hinge pins are carefully placed behind the Horizon lamps to avoid lamp breakage.

15. Insert the diffuser hinge pins into the front of the slotted receptacles located at the bottom rear corners of the luminaire housing. The smooth side of the diffuser should face the interior of the luminaire, and the textured side should face out, to the interior of the booth. Refer to Figure 8.

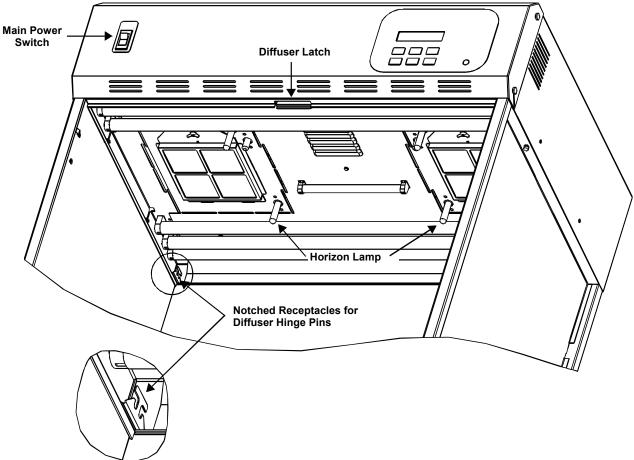


Figure 8. Luminaire Showing Diffuser

16. Rotate the diffuser to its closed position and secure it in place with the latch.

! CAUTION

Ensure that the diffuser latch is secured before releasing. Failure to do so may result in the diffuser sliding out of position.

17. Plug SpectraLight III into a power source matching the voltage specified on the power label on the rear of the unit. Turn on the Main Power Switch located on the front panel.

Note: Immediately upon power up, the unit will go through a brief system test to ensure that the voltage and electrical line are satisfactory. Testing Line appears in the front panel display. The incandescent lamps will be powered during the test. Once the test is complete, the unit is ready for operation

The following describes single- and dual-overhead luminaire installation.

A CAUTION

Do not install the overhead luminaire under a fire sprinkler system. Dissipated heat from the luminaire may cause the sprinkler system to activate.

- 1. Carefully unpack and remove the SpectraLight III from its shipping container.
- 2. Remove the eyebolts (four for the single overhead, eight for the dual overhead) from the accessory package and screw them into the weld nuts located on top of the unit. Refer to Figure 9.

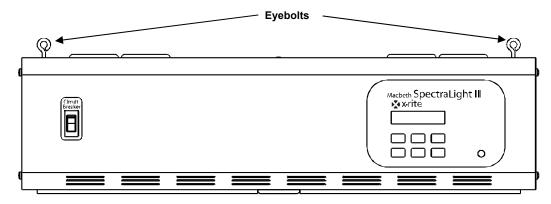


Figure 9. Overhead Luminaire

CAUTION

In the following step, ensure adequate support. Each unit weighs 92 lbs. (41.7 kg).

3. Attach chains (not supplied) to each of the eyebolts and suspend the unit(s) at the appropriate height and angle over the work area. The luminaire should be installed so that it is a minimum of two feet from any wall. Refer to Figure 10.

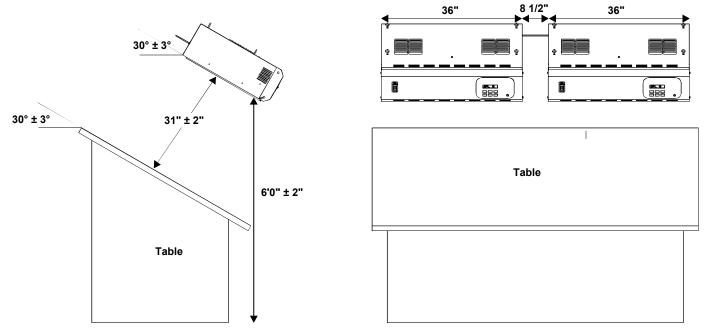


Figure 10. Recommended Overhead Luminaire Installation

SpectraLight III is shipped with its lamps and daylight filters installed. The diffuser is shipped in a separate container and must be installed at this point.

4. Carefully unpack and remove the diffuser from its shipping container.

! CAUTION

In the following step, make sure the hinge pins are carefully placed behind the Horizon lamps to avoid lamp breakage.

5. Insert the diffuser hinge pins into the front of the slotted receptacles located at the bottom rear corners of the luminaire housing. Refer to Figure 11.

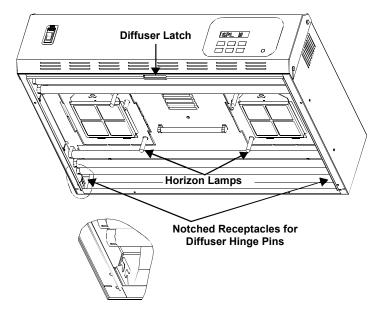


Figure 11. Luminaire Showing Diffuser Mounting

- 6. Rotate the front of the diffuser to its closed position and secure it in place with the latch.
- 7. Connect the remote control (optional with the single unit) to the front panel at the location marked "Remote."
- 8. For single-overhead installations, go to step 10. For dual overhead installations, repeat steps 4 through 6 for the second luminaire.
- 9. Connect the dual luminaire cable between the two luminaires. See Figure 12.

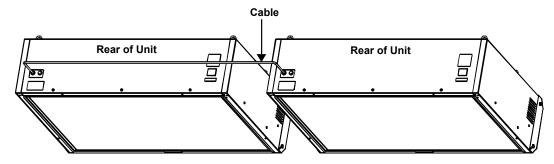


Figure 12. Dual Overhead Luminaire Cable Conection

10. Plug each luminaire into its own, separate 20 A circuit (one for each luminaire). Turn on the main power switch located on the front panel.

Note: Immediately upon power up, the unit will go through a brief system test to ensure that the voltage and electrical line are satisfactory. Testing Line appears in the front panel display. The incandescent lamps will be powered during the test. Once the test is complete, the unit is ready for operation.

MAINTENANCE

Cleaning the Diffuser, Daylight Filters, Lamps, and Reflectors

To clean the unit; refer to Figure 13 and Figure 14, and proceed as follows:

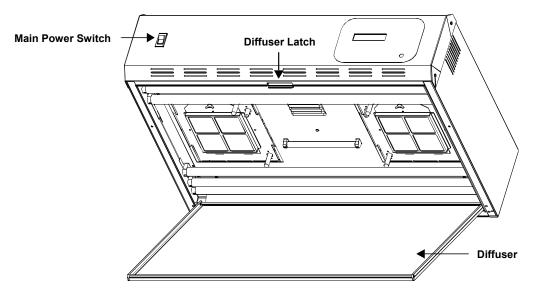


Figure 13. Open Luminaire

1. Turn off the Main Power Switch before proceeding.

A CAUTION

In the following step, make sure there are no objects in the way of the diffuser upon release and be careful to gently lower the diffuser.

- 2. Release the diffuser latch located at the front of the diffuser.
- 3. Lower the front of the diffuser to its completely opened position (vertical).

A CAUTION

In the following step, make sure the hinge pins are removed carefully to avoid Horizon lamp breakage.

- 4. Lift the diffuser up to remove the hinge pins from the slotted receptacles.
- 5. Wash the glass with water containing a mild detergent; rinse thoroughly, and air dry.

A CAUTION

The daylight filters and incandescent lamps get very hot during normal operation. Do not touch the filters or lamps; allow time for them to cool before cleaning.

6. Unscrew the guarter-turn fastener. See Figure 14 on the next page. Gently rotate the filter pack downward.

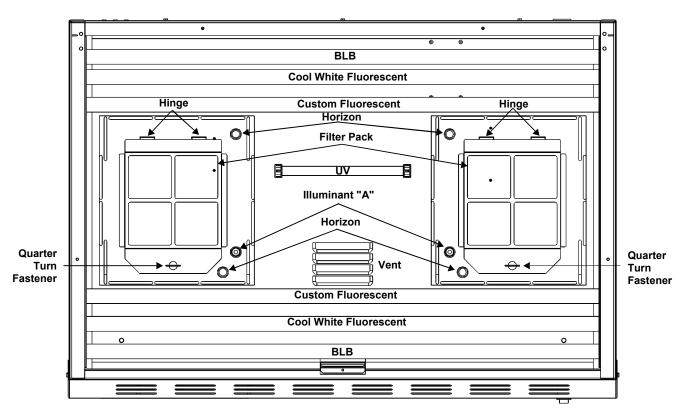


Figure 14. Filter and Lamp Location

- 7. Slide the filter pack sideways and remove it.
- 8. Remove dust with a clean, dry, lint-free cloth.
- 9. Remove dirt and other foreign material with a spray-type window cleaner. AVOID EXCESSIVE MOISTURE.
- 10. Air dry and return the pack to the same position from which it was removed in step 6.

Note: Ensure the filter pack is completely dry prior to operating the unit. Moisture may damage the filter when heat from the lamps is present.

11. Repeat steps 6 through 10 for the second filter pack.

⚠ CAUTION

In the following step, make sure the hinge pins are removed carefully to avoid Horizon lamp breakage.

- 12. Remove dirt from the daylight lamp reflectors with a clean cloth dampened with warm water or an ammonia-based window cleaner.
- 13. Replace the daylight filter packs.
- 14. Remove dust from all remaining lamps with a clean, dry, lint-free cloth.
- 15. Remove dirt from all the remaining reflectors with a clean cloth dampened with warm water or an ammonia-based window cleaner. Air dry all components.
- 16. Install and secure the diffuser. Make sure the hinge pins are carefully placed behind the horizon lamps to avoid lamp breakage.
- 17. Restore power through the Main Power Switch and begin normal operation.

Replacing Lamps

Replace burned out lamps immediately in order to maintain the overall performance standards of the fixture. We recommend replacing lamps in complete sets. For example, if one daylight lamp burns out, replace both of them. Refer to "Parts List" later in this document.

Lamp Type	Replace Every	Lamp Type	Replace Every
Simulated Daylight	400 hours	Cool White Fluorescent	4000 hours
Horizon	2000 hours	Ultraviolet 30 Watt	4000 hours
Illuminant "A"	2000 hours	Ultraviolet 6 Watt	4000 hours

A CAUTION

Allow time for the daylight filters or incandescent lamps to cool before handling them. Always use lens paper or equivalent when handling the lamps. Skin oils interfere with their performance.

- 1. Turn off the Main Power Switch before proceeding.
- 2. For booth installations, remove the front panel.
- 3. Release the front diffuser latch. Lower the front of the diffuser to its opened position (vertical).
- 4. Unscrew the quarter-turn fastener (see Figure 14.) and lower the diffuser. Slide the filter packs sideways to remove them.

Note: Take special care to remove the filter packs. Improper handling during removal or replacement may result in breakage.

- 5. Push one end of the lamp into the spring loaded socket with pressure to release the other end from its socket.
- 6. Lift the lamp clear of both sockets and discard in an appropriate receptacle.
- 7. Using a piece of lens paper (or equivalent) placed between your thumb and forefinger; insert the replacement lamp into the sockets. Refer to Figure 15.

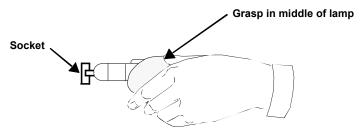


Figure 15. Tungsten-Halogen Lamp Replacement


- 8. After the lamp has been replaced, replace the filter packs and secure them in place.
- 9. Reset the lamp time meter using the procedure "Resetting the Lamp Time Meter" on the following pages.

Certification Program

X-Rite is pleased to offer a Preventative Maintenance and Certification service for users of SpectraLight viewing systems. This factory authorized service provides a Certificate of Performance with traceability to A2LA (American Association for Laboratory Accreditation) for the line of SpectraLight viewing systems. Annual completion of this service is recommended and will provide you with the assurance that your system meets the specified requirements for color rendering quality.

OPERATION

Note: When powering off the SpectraLight III using the Main Power Switch, wait at least 5 seconds before you power it on again. This will enable all of the firmware and hardware to properly shut off. If you attempt power on less than 5 seconds after the power off, the unit may not power up. If this occurs, power off the unit, wait at least 5 seconds, and then power it on using the Main Power Switch.

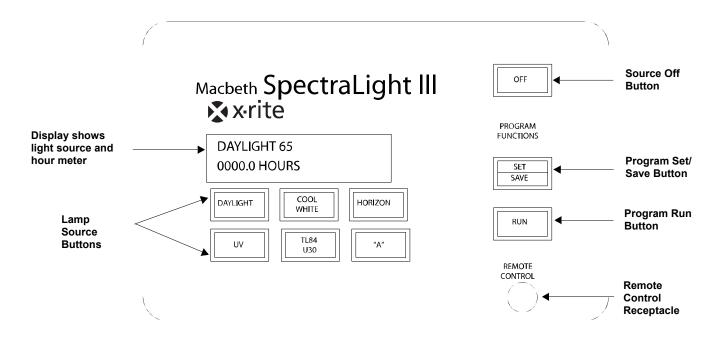

Selecting a Light Source

To select a light source for viewing a sample, simply press and release the button on the front panel for the light source. The source remains on until you select another light source or press the Source Off button on the membrane panel.

Using the Source Off Button

The Source Off Button should be used to turn off a selected lamp. You can think of using this button as putting the unit in "idle" until another lamp source is selected. Do not use the Source Off Button to power off the entire unit. You should use the Main Power Switch (located to the left of the Membrane Panel) to completely cut power to the unit for maintenance purposes.

Programming the SpectraLight III

The SpectraLight III can be programmed to power a sequence of light sources, each for a specified period of time. The program is helpful if you want to view a sample under several light sources in succession and focus on the sample's appearance rather than operating the front panel.

To set up the program, proceed as follows:

- Press and hold the Set/Save button until PGM: appears in the front panel display.
- 2. Press and hold the light source button for the first source in the sequence. Hold the button for the number of seconds the source should be powered in the sequence and then release.
- 3. **Seconds**= ## appears in the front panel display. ## indicates the number of seconds the button has been held. For example, press and hold the Cool White button for three seconds. **Seconds=03** appears in the display.
- 4. **PGM: XX** appears in the display. XX indicates the light source you selected. For example, **PGM: CW** indicates that Cool White Fluorescent is the first source in the sequence.
- Repeat step 2 for the next light source in the sequence.

- 6. **PGM: XX YY** appears in the display. YY indicates the second light source in the sequence. For example, **PGM:CW HR** indicates that Cool White Fluorescent is the first source and Horizon is the second source in the sequence.
- 7. Repeat step 2 for the remaining light sources in the sequence.
- 8. Press the **Set/Save** Button to save the program. **Program Saved** appears in the display. You are now finished with programming the SpectraLight III.
- 9. To change the program at any time, repeat the above sequence of steps and any previous program is erased.

Running the Program

To run the program on a single unit, proceed as follows:

- 1. Press the Run button. The unit indicates "L/AUTO" in the display.
- 2. The SpectraLight III runs the program. The sources are powered in the sequence you programmed. The program continually runs until you press the Source Off button.

To run the program in a Master/Slave Setup (daisy chain configuration), proceed as follows:

- 1. Press the Run button twice on the master unit. The unit indicates "R/AUTO" in the display.
- 2. The SpectraLight III runs the program. The sources are powered in the sequence you programmed on the master and slave units. The program continually runs until you press the Source Off button on the master unit.

Note: You should not press the UV source button while the program is running. If this occurs, the program will stop regardless if it is finished. You must press another source button to reset the unit and then run the program again. If you need UV in the program, you must re-program the unit. Follow the instructions described in "Programming the SpectraLight III".

Using the Automatic Shut-Off Feature

The SpectraLight III Daylight lamps have the shortest life among all the lamps in the unit. To reduce the frequency of Daylight lamp replacement, the SpectraLight III has a feature called "Automatic Shut-Off." This feature automatically switches the lamp source from Daylight to Cool White Fluorescent after a period of five minutes. This feature is helpful if a user leaves the booth with the Daylight source selected and does not switch to another source. The Automatic Shut-Off feature is automatically enabled and is indicated by an * in the display.

You can temporarily disable the Automatic Shut-Off feature. To do so, proceed as follows:

- 1. While the Daylight source is selected, press the Daylight button.
- 2. AUTO SHUTOFF DE-ACTIVATED appears in the display. Notice that the * no longer appears in the display.
- 3. If the Daylight lamp is powered for more than five minutes, it remains selected until you select another source.

The Automatic Shut-Off Feature is enabled again by turning the Daylight source off and then on again. To do this, proceed as follows:

- 1. While the Daylight source is selected, press the Source Off button. The Daylight source is turned off.
- 2. Press the Daylight source button. **DAYLIGHT** * appears in the display. The Auto Shut-Off is enabled.

Resetting the Lamp Time Meter

The SpectraLight III allows the user to replace lamps. After lamp replacement, you should reset the time meter for the new lamp. To reset the lamp time meter, proceed as follows:

- 1. Press and hold the source button for the replaced lamp for five seconds.
- PRESS SET/SAVE TO CONFIRM RESET appears in the display.
- Press the Set/Save button.
- 4. The hours are set to zero (0).

Interpreting Diagnostic Messages

The SpectraLight III may display one of these diagnostic messages in the event that a situation has occurred which prevents the SpectraLight III from operating normally. The messages and troubleshooting suggestions are listed below.

I got this message	What does it mean?	What should I do?
Over temperature	The unit is overheating.	1) Turn off the unit using the Main Power Switch.
		2) Make sure there is nothing on top of the unit blocking airflow. If so, remove the object and turn on the unit.
		3) If no objects are found or the message remains after you turn on the unit, proceed to step 4.
		4) Call X-Rite for assistance.
Line Problem	There is an electrical power problem.	Turn off the unit and then turn on the unit. If the message remains, call X-Rite for assistance.
Daylight Lamp Burned Out	The Daylight Lamp needs to be replaced.	Turn off the unit using the Main Power Switch. Follow the procedure "Replacing Lamps" on the previous pages.

SPL (Daylight) Lamp Kit A-L/SPLD

This kit consists of two (2) 750 Watt Tungsten Halogen lamps. Two (2) required for the SPL III. Sold in packages of two (2) or as part of a specific lamp kit.

SPL (Horizon) Lamp Kit A-L/SPLH

This kit consists of four (4) 500 Watt Tungsten Halogen lamps. Four (4) required for the SPL III. Sold in packages of four (4) or as part of a specific lamp kit.

SPL (Illuminant "A") Lamp Kit A-L/SPLIA

This kit consists of two (2) 150 Watt Incandescent lamps. Two (2)required for the SPL III. Sold in packages of two (2) or as part of a specific lamp kit.

SPL (CWF) 36" Lamp Kit A-L/SPLCW

This kit consists of two (2) F30T8/CW Cool White Fluorescent lamps. Two (2) required for the SPL III. Sold in packages of two (2) or as part of a specific lamp kit.

SPL (TL84) 36" Lamp Kit A-L/SPL84

This kit consists of two (2), F30T8/TL84 Fluorescent lamps. Two (2) lamps required for the SPL III. Sold in packages of two (2) or as part of a specific lamp kit.

SPL (U30) 36" Lamp Kit A-L/SPLU30

This kit consists of two (2), F30T12/U30 Ultralume 30 Fluorescent lamps. Two (2) required for the SPL III. Sold in packages of two (2) or as part of a specific lamp kit.

SPL (Ultraviolet 30 Watt) 36" Lamp Kit A-L/SPLUV

This kit consists of two (2) F30T8/BLB Ultraviolet lamps. Two (2) required for the SPL III. Sold in packages of two (2) or as part of a specific lamp kit.

SPL (Ultraviolet 6 Watt) Lamp Kit A-L/SPLUV6W

This kit consists of two (2) F6T5/BLB Ultraviolet lamps. One (1) required for the SPL III. Sold in packages of two (2) or as part of a specific lamp kit.

SPL (U35) 36" Lamp Kit A-L/SPLU35

This kit consists of two (2), F25T8/U35 Ultralume 35 Fluorescent lamps, one (1) SPLIII-510 Instruction sheet, one (1) SD43-SPL-U30 Label, and one (1) SD43-SPL-CWF Label.

SPL III (TL84) Complete Lamp Kit A-LK/SPL84

This kit consists of two (2) 750 Watt Tungsten Halogen Daylight lamps, four (4) 500 Watt Tungsten Halogen Horizon lamps, two (2) 150 Watt Incandescent lamps, two (2) F30T8/TL84 Fluorescent lamps, two (2) F30T8/BLB UV lamps, and one (1) F6T5/BLB UV lamp. The quantities provided in kit represent the number of each lamp required for each SpectraLight III. Lamps are sold in packages of fifteen (15) or as part of a specific lamp kit.

SPL III (U30) Complete Lamp Kit A-LK/SPLU30

This kit consists of two (2) 750 Watt Tungsten Halogen Daylight lamps, four (4) 500 Watt Tungsten Halogen Horizon lamps, two (2) 150 Watt Incandescent lamps, two (2) F30T8/U30 Fluorescent lamps, two (2) F30T8/BLB UV lamps, and one (1) F6T5/BLB UV lamp. The quantities provided in kit represent the number of each lamp required for each SpectraLight III. Lamps are sold in packages of fifteen (15) or as part of a specific lamp kit.

SPL III Daylight Filter Pack (D75) VB or OVHD A-FP/SPL75

Patented D75 North Sky Daylight at 7500 K filter pack assembly. For SPL III Viewing Booths only. Two (2) required for the SPLIII. Sold in packages of two (2).

SPL III Daylight Filter Pack (D65) VB or OVHD A-FP/SPL65

Patented D65 Average North Sky Daylight at 6500 K filter pack assembly. For SPL III Viewing Booths only. Two (2) required for the SPL III. Sold in packages of two (2).

SPL III Daylight Filter Pack (D50) VB or OVHD A-FP/SPL50

Patented D50 Noon Sky Daylight at 5000 K filter pack assembly. For SPL III Viewing Booth or Overhead Luminaire. Two (2) required for the SPL III. Sold in packages of two (2).

SPL Diffuser and Door Assembly A-AK/SPLDD

Prismatic "water white" glass diffuser. For SPL III Viewing Booth or Overhead Luminaire. One (1) required for the SPL III. Sold in packages of one (1).

SPL Remote Control Kit A-CK/SPLR

Tethered remote control for use with the SPL III Viewing Booth or Overhead Luminaire.

X-Rite makes no warranty of any kind with regard to the material contained in this manual, including implied warranties or fitness for a particular purpose. X-Rite shall not be liable for errors contained herein or for incidental or consequential damages in connection with the performance or use of this material. This manual is the copyright of X-Rite. Any reproduction of the publication in whole or in part without the express permission of X-Rite is a breach of this copyright. SpectraLight® is a registered trademark of X-Rite, Incorporated.



Corporate Headquarters

X-Rite, Incorporated 4300 44th Street SE Grand Rapids, Michigan 49512 Phone 1 800 248 9748 or 1 616 803 2100 Fax 1 800 292 4437 or 1 616 803 2705

European Headquarters

X-Rite Europe GmbH Althardstrasse 70 8105 Regensdorf Switzerland Phone (+41) 44 842 24 00 Fax (+41) 44 842 22 22

Asia Pacific Headquarters

X-Rite Asia Pacific Limited 36th Floor, No. 169 Electric Road Hong Kong, China Phone (852)2568-6283 Fax (852)2885 8610

Please visit www.xrite.com for a local office near you.